

---

## K45 Engine cooling fan relay

---

### **Best Views**

- ➡ Engine Cooling, TCI Diesel, as of 01/97 303-03C-00-002
- ➡ Engine Cooling, TCI Diesel, before 01/97 303-03C-00-001
- ➡ Engine Cooling, Duratec-VE, as of 01/97 303-03B-00-002
- ➡ Engine Cooling, Duratec-VE, before 01/97 303-03B-00-001
- ➡ Engine Cooling, ZETEC-E, with air conditioning, as of 01/97 303-03A-00-003
- ➡ Engine Cooling, ZETEC-E, with air conditioning, before 01/97 303-03A-00-002
- ➡ Engine Cooling, ZETEC-E, without air conditioning 303-03A-00-001

---


## K45 Engine cooling fan relay, ZETEC-E, without air conditioning

---

### **Best View**

- ➡ Engine Cooling, ZETEC-E, without air conditioning 303-03A-00-001

engine compartment, front, LH side, in Battery Junction Box (BJB) (E 3)

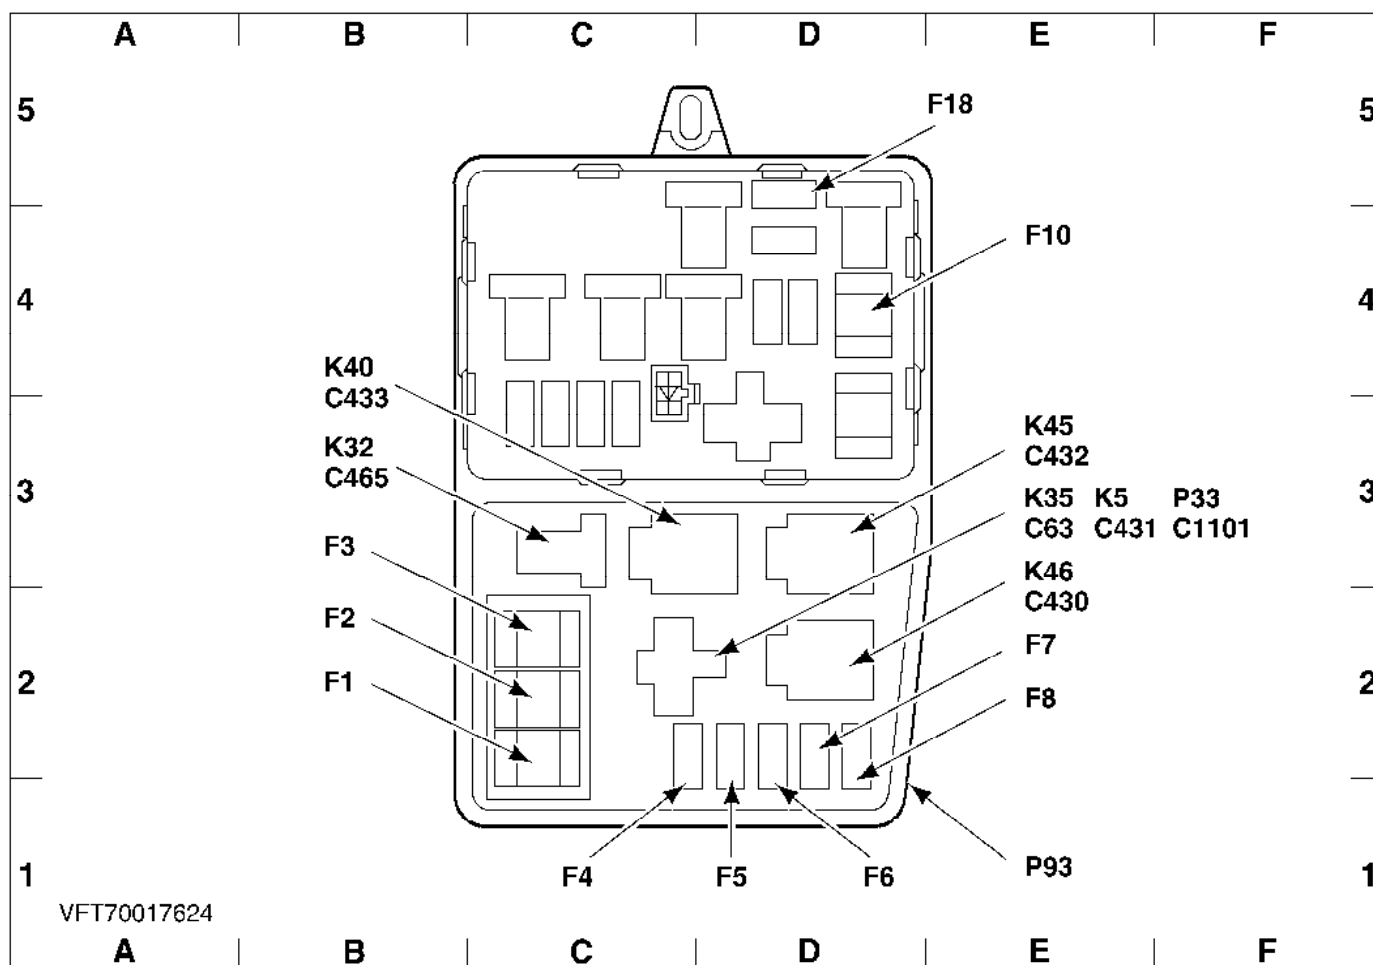

---


## K45 Engine cooling fan relay, ZETEC-E, with air conditioning, before 01/97

---

## **Best View**

➡ Engine Cooling, ZETEC-E, with air conditioning, before 01/97 303-03A-00-002

engine compartment, front, LH side, in Battery Junction Box (BJB) (E 3)

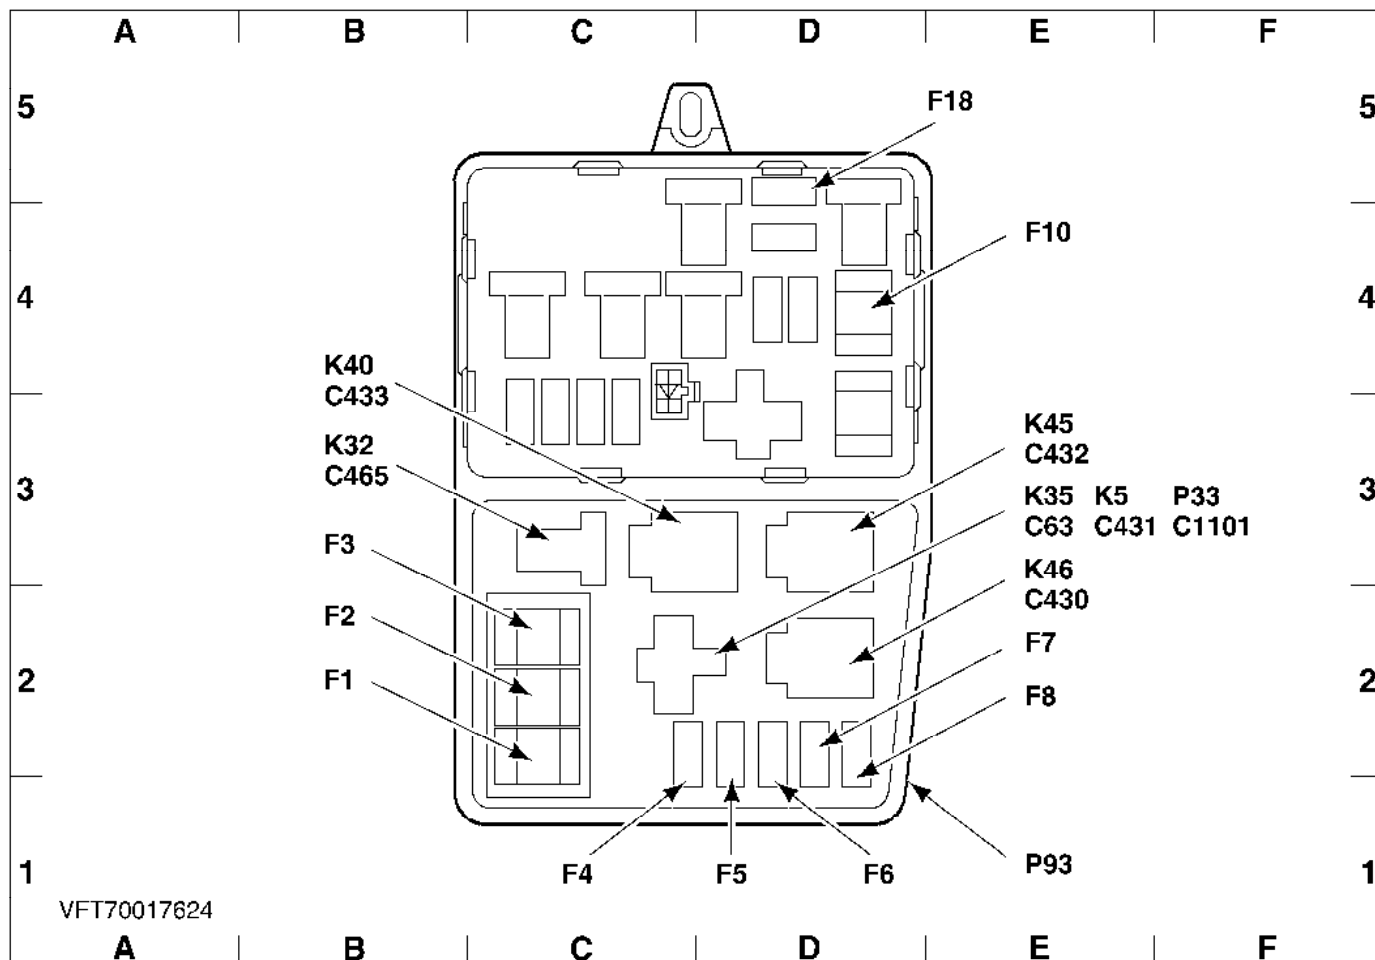

---


K45 Engine cooling fan relay, ZETEC-E, with air conditioning, as of 01/97

---

## **Best View**

➡ Engine Cooling, ZETEC-E, with air conditioning, as of 01/97 303-03A-00-003

engine compartment, front, LH side, in Battery Junction Box (BJB) (E 3)

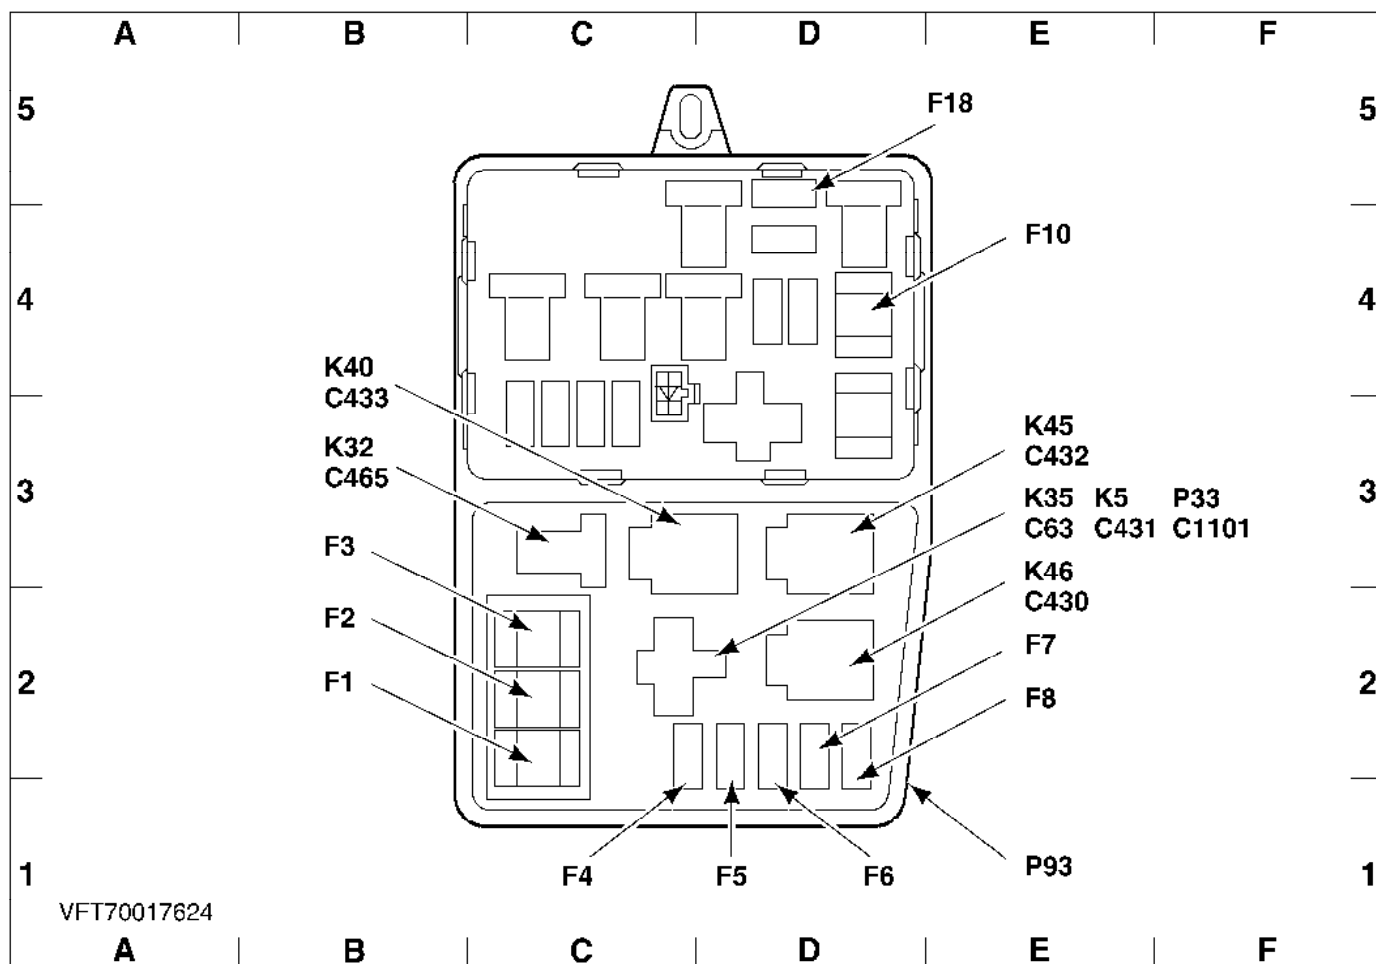


K45 Engine cooling fan relay, G18, petrol engines, LHD without daytime running lamps, before 01/97

### **Best Views**

- ➡ Engine Cooling, Duratec-VE, before 01/97 303-03B-00-001
- ➡ Engine Cooling, TCI Diesel, before 01/97 303-03C-00-001

engine compartment, front, LH side, in Battery Junction Box (BJB) (E 3)

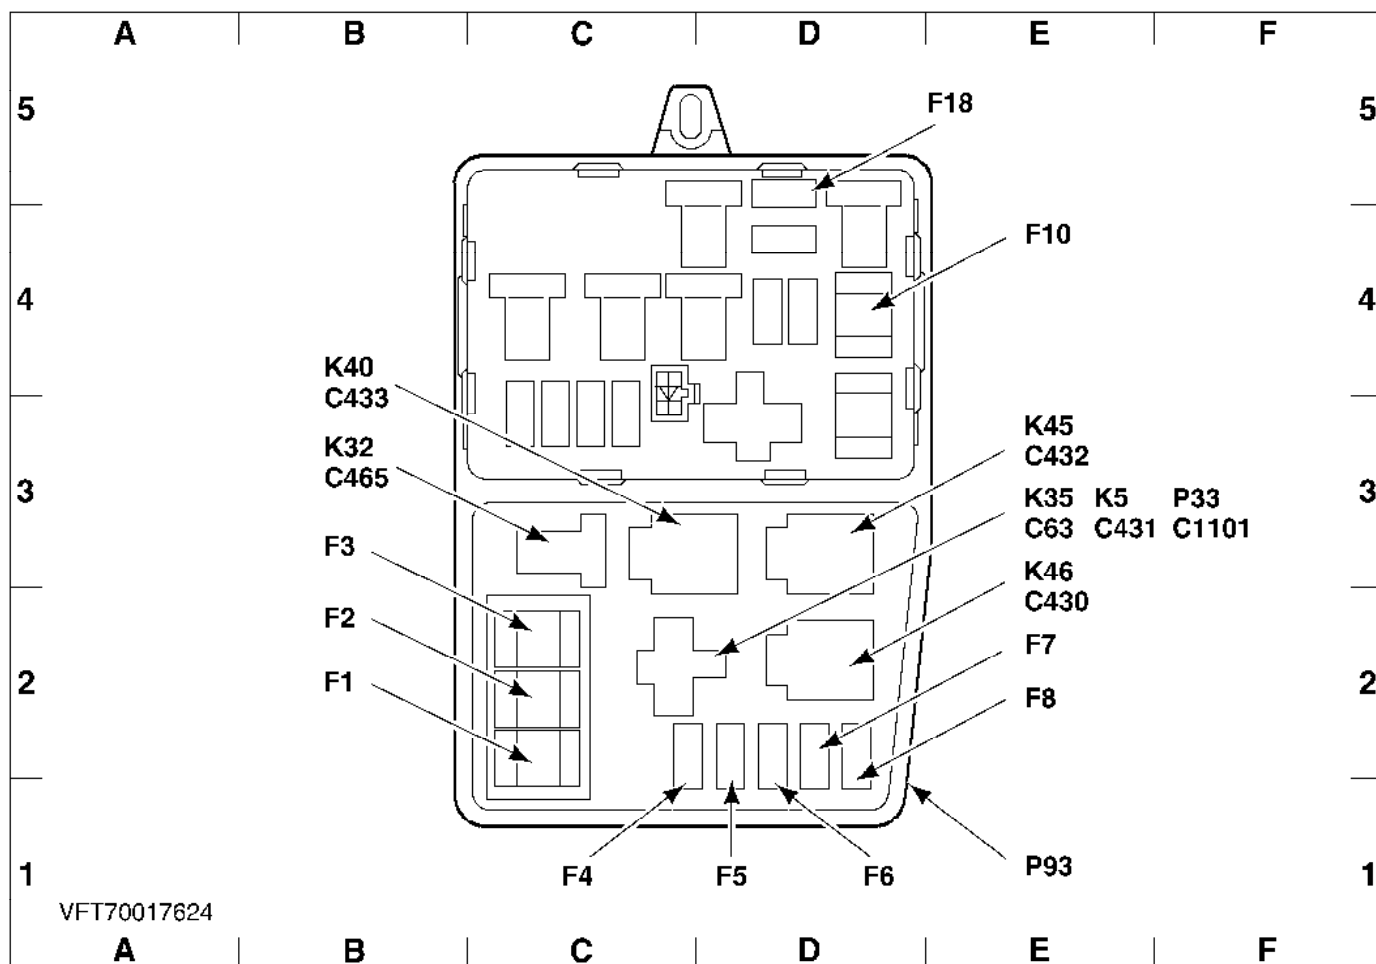


K45 Engine cooling fan relay, G18, petrol engines, RHD, before 01/97

### **Best Views**

- ➡ Engine Cooling, Duratec-VE, before 01/97 303-03B-00-001
- ➡ Engine Cooling, TCI Diesel, before 01/97 303-03C-00-001

engine compartment, front, LH side, in Battery Junction Box (BJB) (E 3)

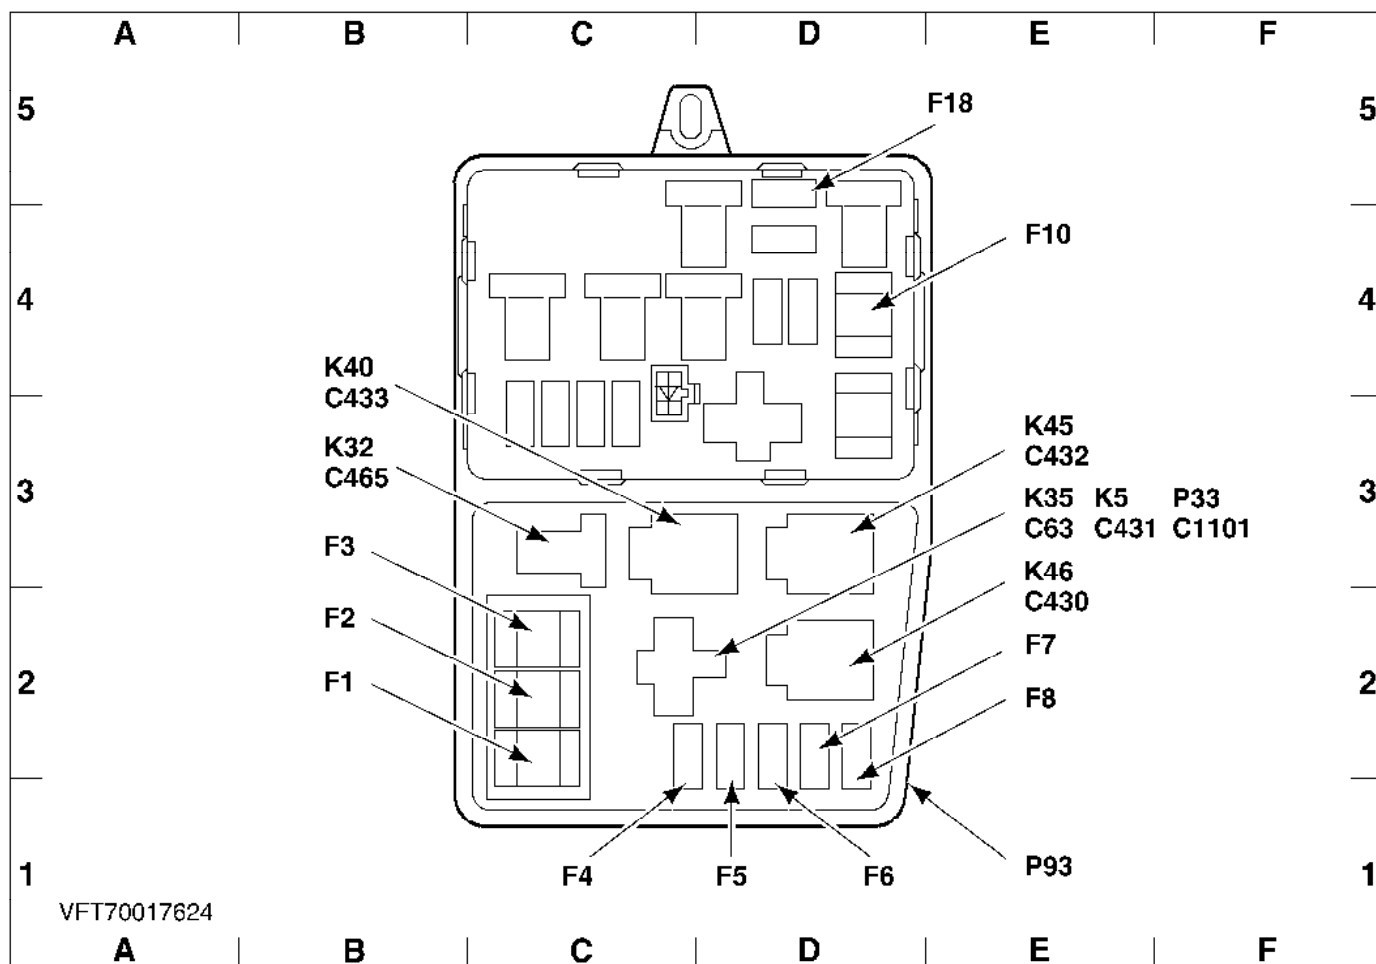


K45 Engine cooling fan relay, G18, petrol engines, with daytime running lamps, before 01/97

### **Best Views**

- ➡ Engine Cooling, Duratec-VE, before 01/97 303-03B-00-001
- ➡ Engine Cooling, TCI Diesel, before 01/97 303-03C-00-001

engine compartment, front, LH side, in Battery Junction Box (BJB) (E 3)

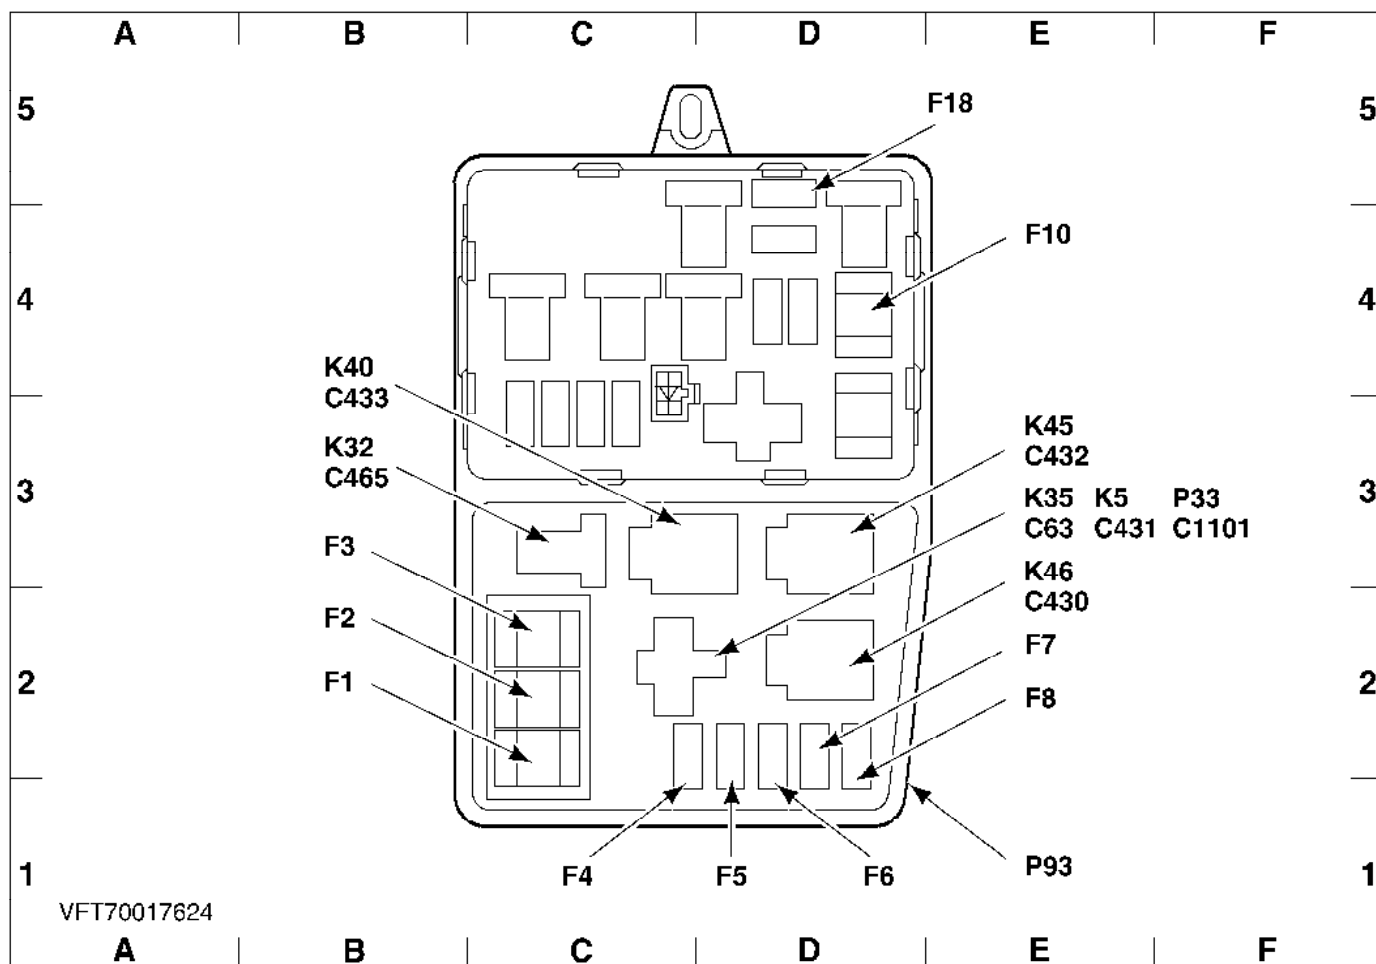


K45 Engine cooling fan relay, G18, as of 01/97

### **Best Views**

- ➡ Engine Cooling, Duratec-VE, as of 01/97 303-03B-00-002
- ➡ Engine Cooling, TCI Diesel, as of 01/97 303-03C-00-002

engine compartment, front, LH side, in Battery Junction Box (BJB) (E 3)

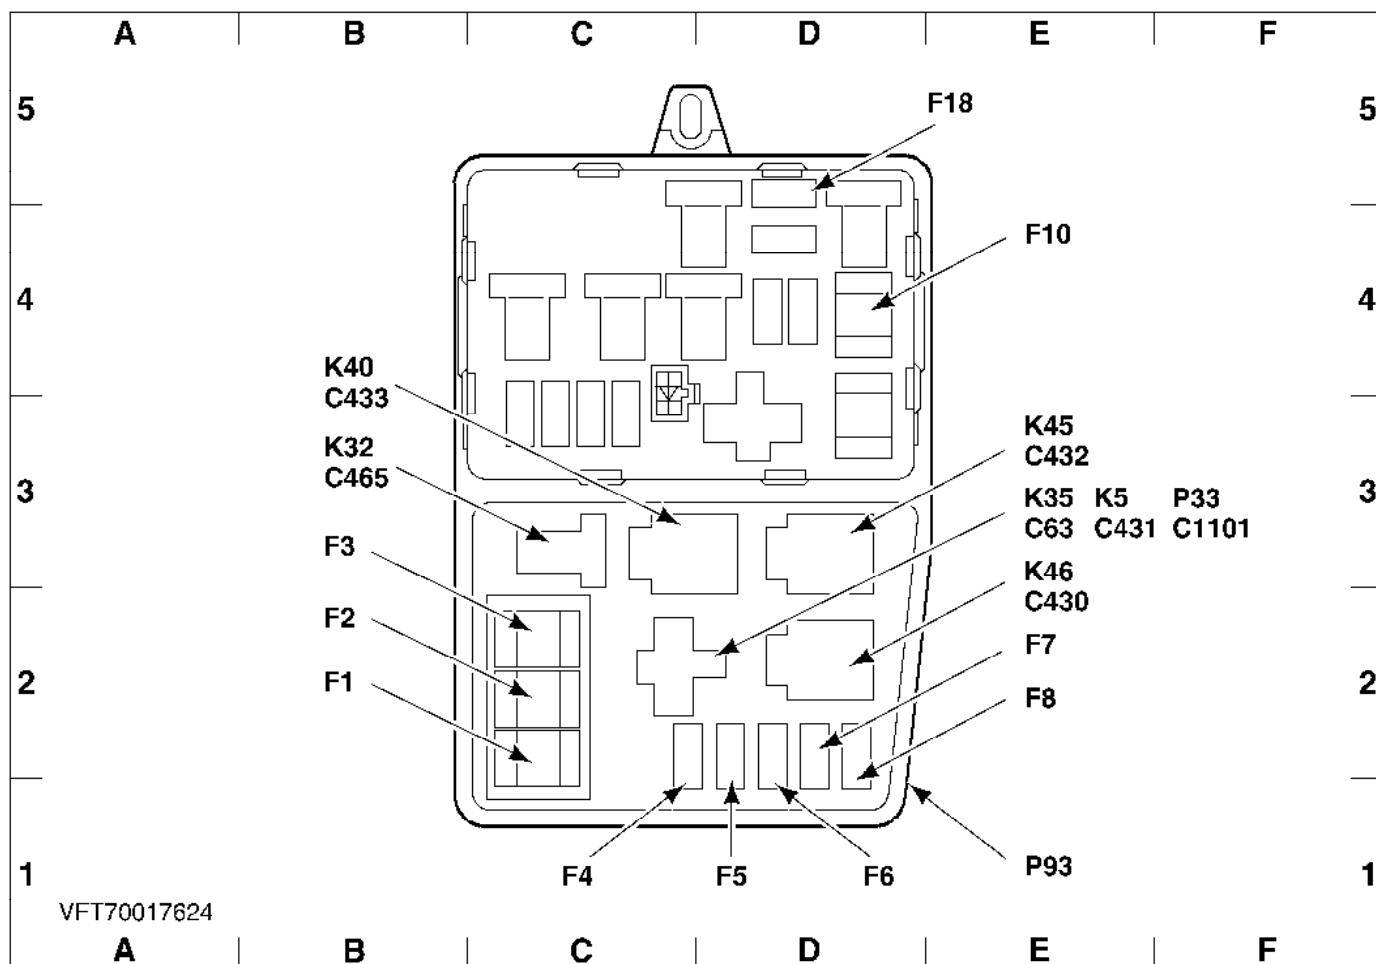


K45 Engine cooling fan relay, ZETEC engines, automatic transmission, as of 03/97

### **Best Views**

- ➡ Engine Cooling, ZETEC-E, without air conditioning 303-03A-00-001
- ➡ Engine Cooling, Duratec-VE, before 01/97 303-03B-00-001
- ➡ Engine Cooling, Duratec-VE, as of 01/97 303-03B-00-002
- ➡ Engine Cooling, TCI Diesel, before 01/97 303-03C-00-001
- ➡ Engine Cooling, TCI Diesel, as of 01/97 303-03C-00-002

engine compartment, front, LH side, in Battery Junction Box (BJB) (E 3)

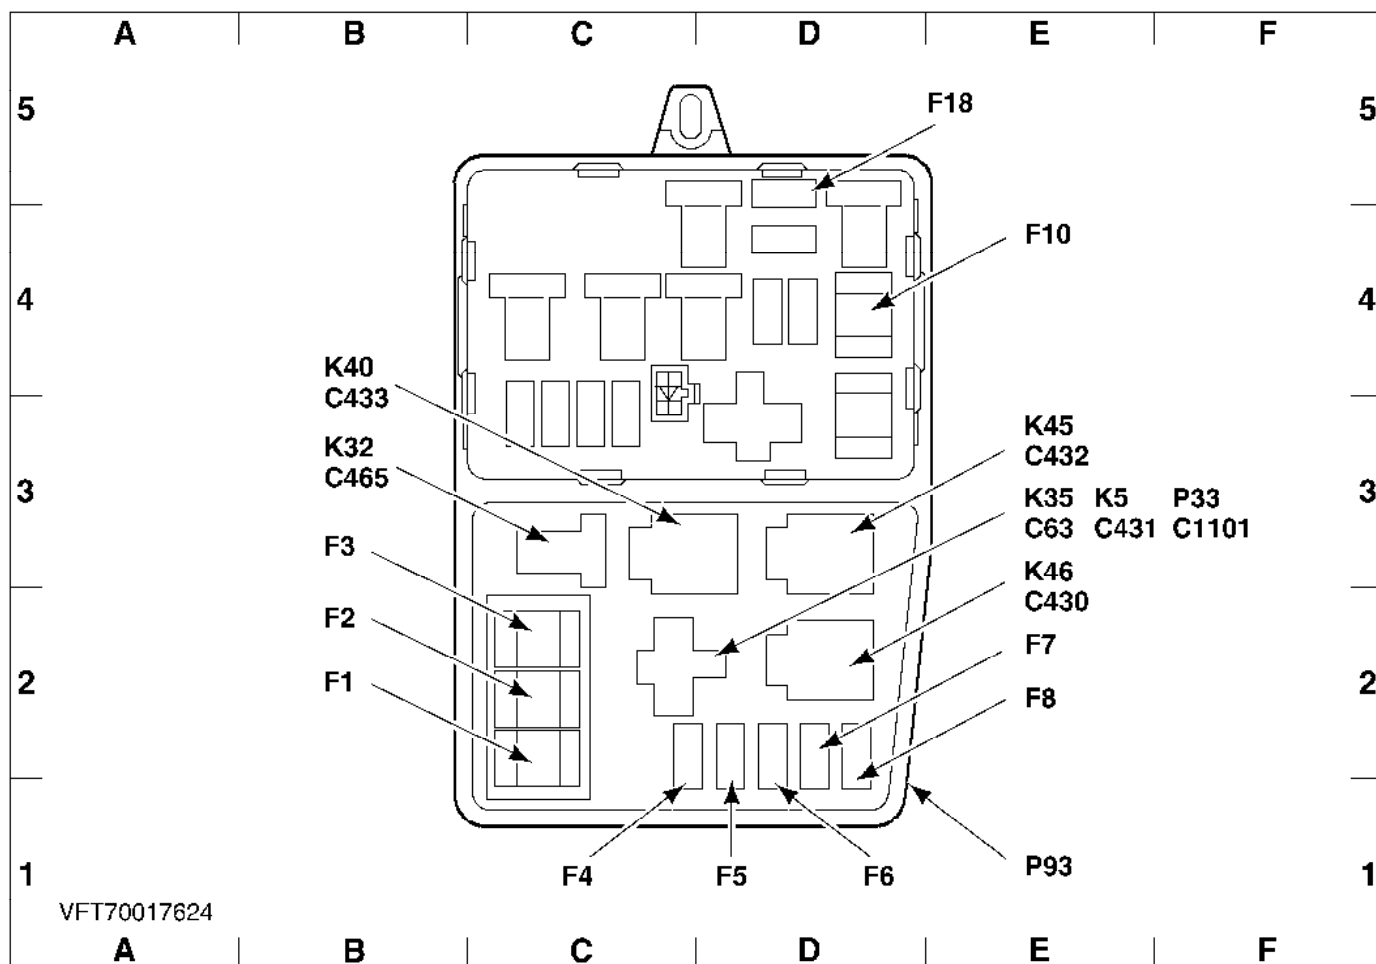


K45 Engine cooling fan relay, ZETEC engines, automatic transmission, before 03/97

### **Best Views**

- ➡ Engine Cooling, ZETEC-E, without air conditioning 303-03A-00-001
- ➡ Engine Cooling, Duratec-VE, before 01/97 303-03B-00-001
- ➡ Engine Cooling, Duratec-VE, as of 01/97 303-03B-00-002
- ➡ Engine Cooling, TCI Diesel, before 01/97 303-03C-00-001
- ➡ Engine Cooling, TCI Diesel, as of 01/97 303-03C-00-002

engine compartment, front, LH side, in Battery Junction Box (BJB) (E 3)



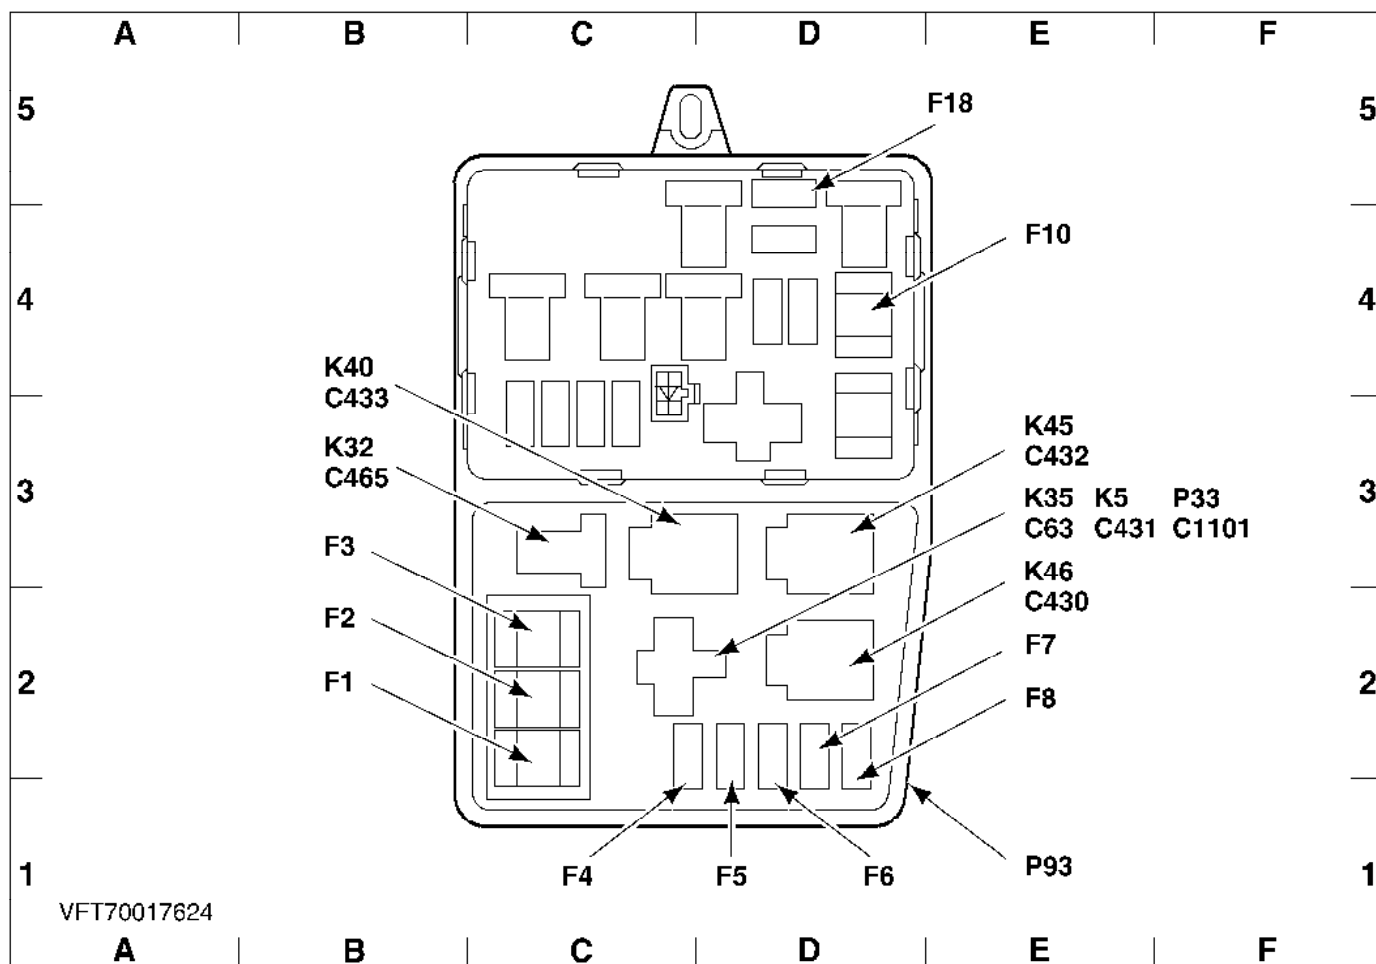


K45 Engine cooling fan relay, ZETEC engines, manual transmission, as of 03/97

### **Best Views**

- ➡ Engine Cooling, ZETEC-E, without air conditioning 303-03A-00-001
- ➡ Engine Cooling, Duratec-VE, before 01/97 303-03B-00-001
- ➡ Engine Cooling, Duratec-VE, as of 01/97 303-03B-00-002
- ➡ Engine Cooling, TCI Diesel, before 01/97 303-03C-00-001
- ➡ Engine Cooling, TCI Diesel, as of 01/97 303-03C-00-002

engine compartment, front, LH side, in Battery Junction Box (BJB) (E 3)

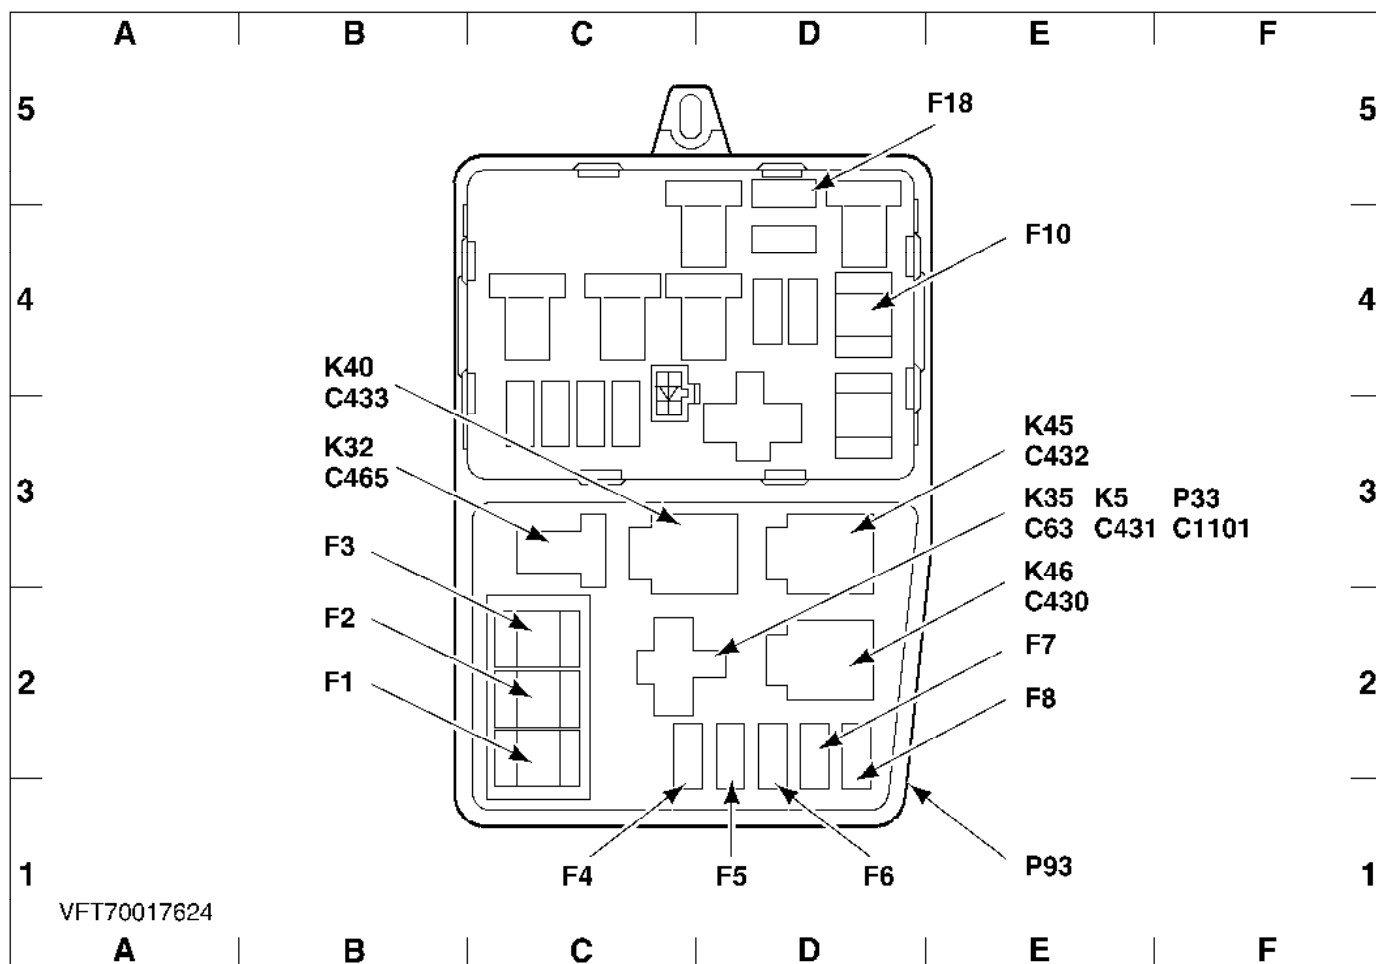


K45 Engine cooling fan relay, ZETEC engines, manual transmission, before 03/97

### **Best Views**

- ➡ Engine Cooling, ZETEC-E, without air conditioning 303-03A-00-001
- ➡ Engine Cooling, Duratec-VE, before 01/97 303-03B-00-001
- ➡ Engine Cooling, Duratec-VE, as of 01/97 303-03B-00-002
- ➡ Engine Cooling, TCI Diesel, before 01/97 303-03C-00-001
- ➡ Engine Cooling, TCI Diesel, as of 01/97 303-03C-00-002

engine compartment, front, LH side, in Battery Junction Box (BJB) (E 3)

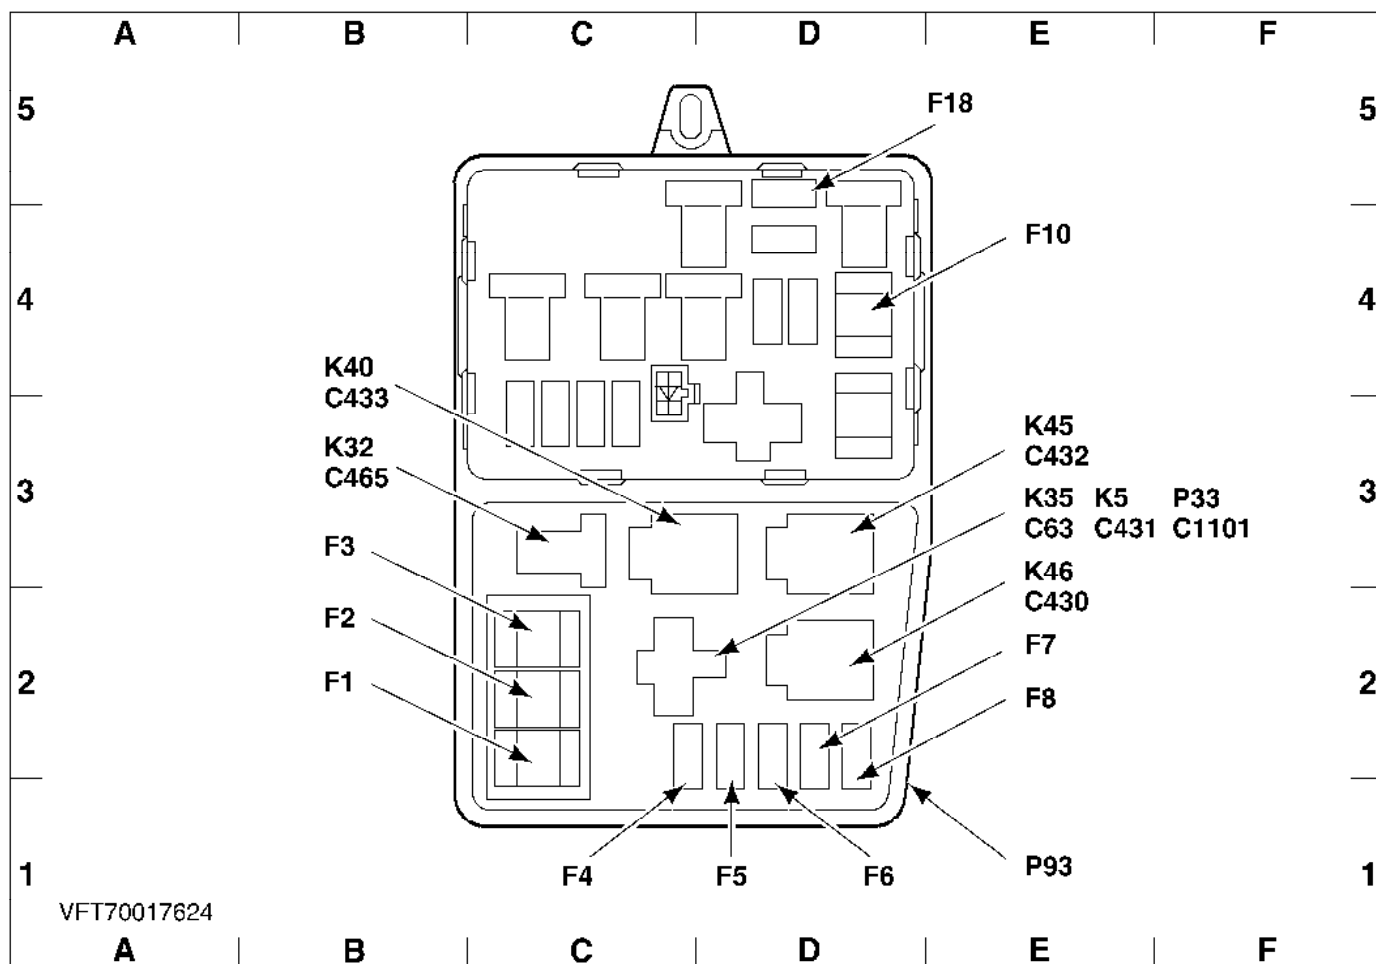


K45 Engine cooling fan relay, Duratec-VE, before 01/97

### **Best View**

➡ Engine Cooling, Duratec-VE, before 01/97 303-03B-00-001

engine compartment, front, LH side, in Battery Junction Box (BJB) (E 3)

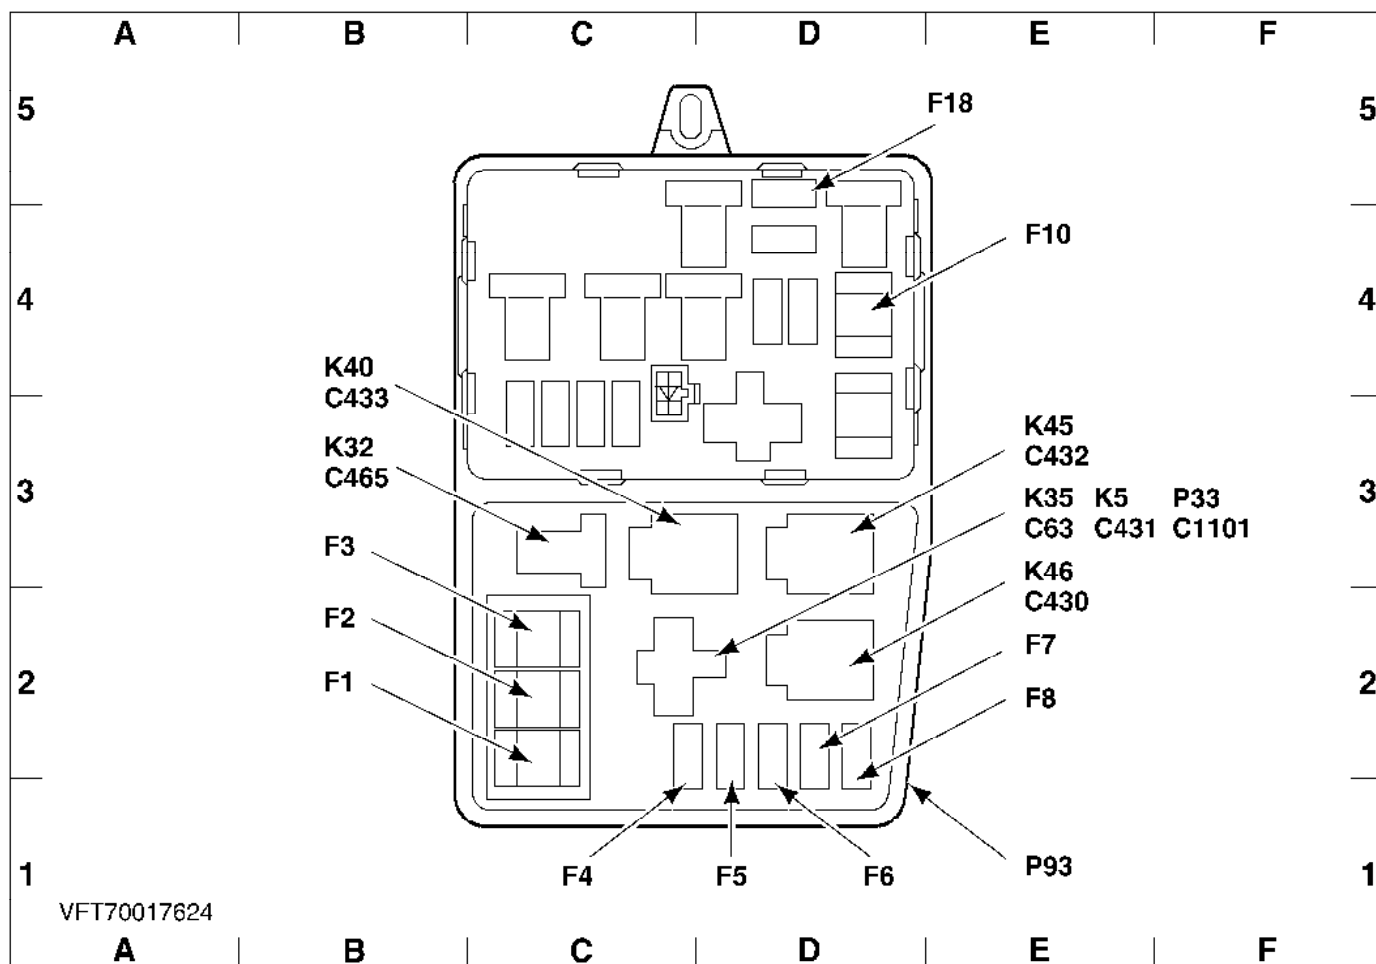


K45 Engine cooling fan relay, Duratec-VE, automatic transmission, as of 03/97

### **Best Views**

- ➡ Engine Cooling, Duratec-VE, before 01/97 303-03B-00-001
- ➡ Engine Cooling, Duratec-VE, as of 01/97 303-03B-00-002

engine compartment, front, LH side, in Battery Junction Box (BJB) (E 3)

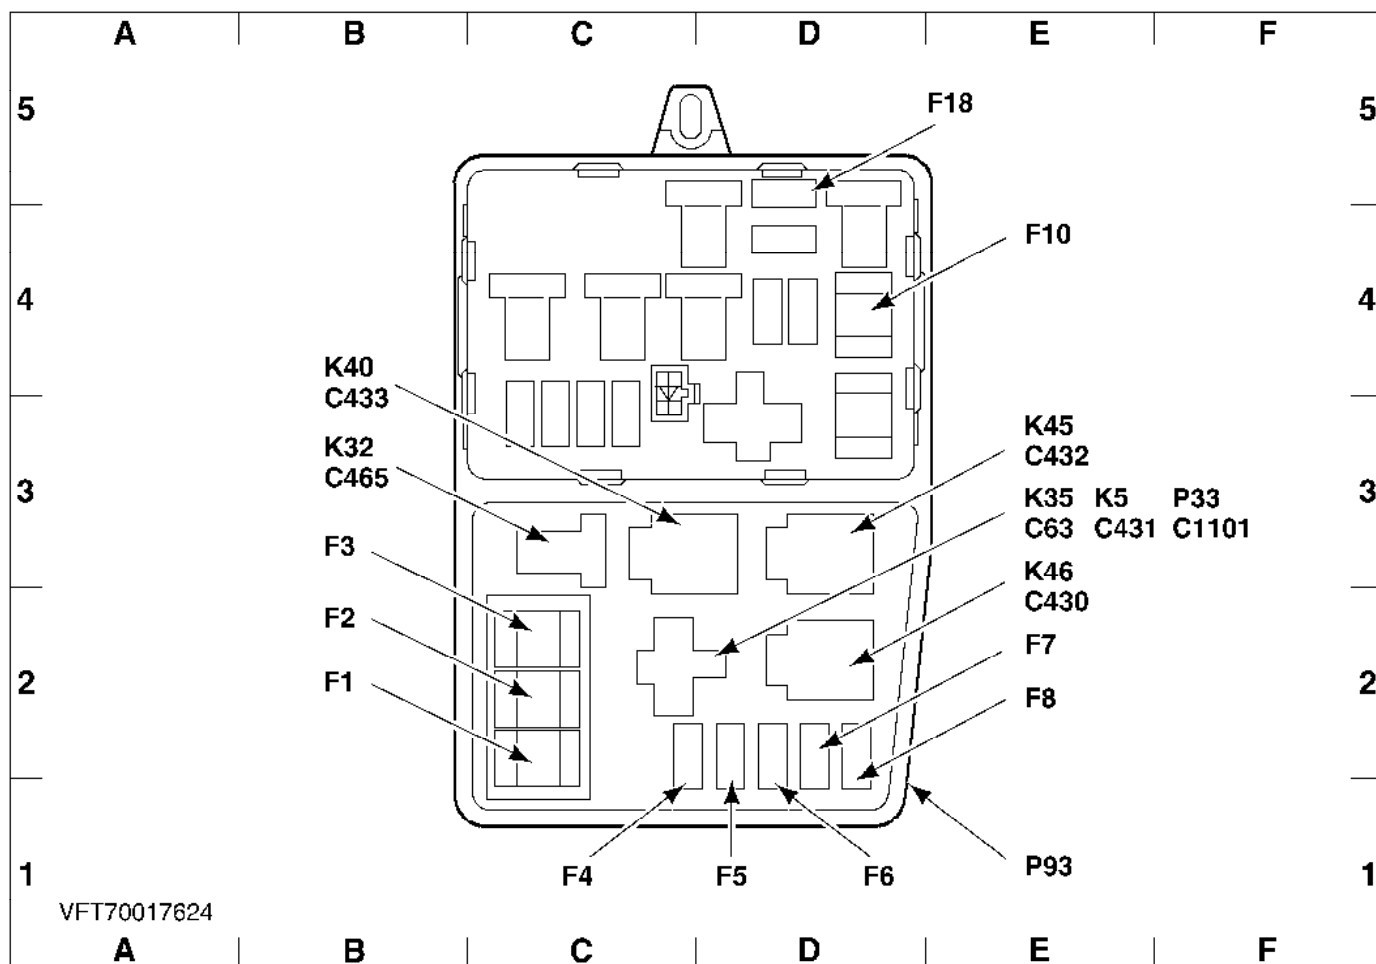


K45 Engine cooling fan relay, Duratec-VE, automatic transmission, before 03/97

### **Best Views**

- ➡ Engine Cooling, Duratec-VE, before 01/97 303-03B-00-001
- ➡ Engine Cooling, Duratec-VE, as of 01/97 303-03B-00-002

engine compartment, front, LH side, in Battery Junction Box (BJB) (E 3)

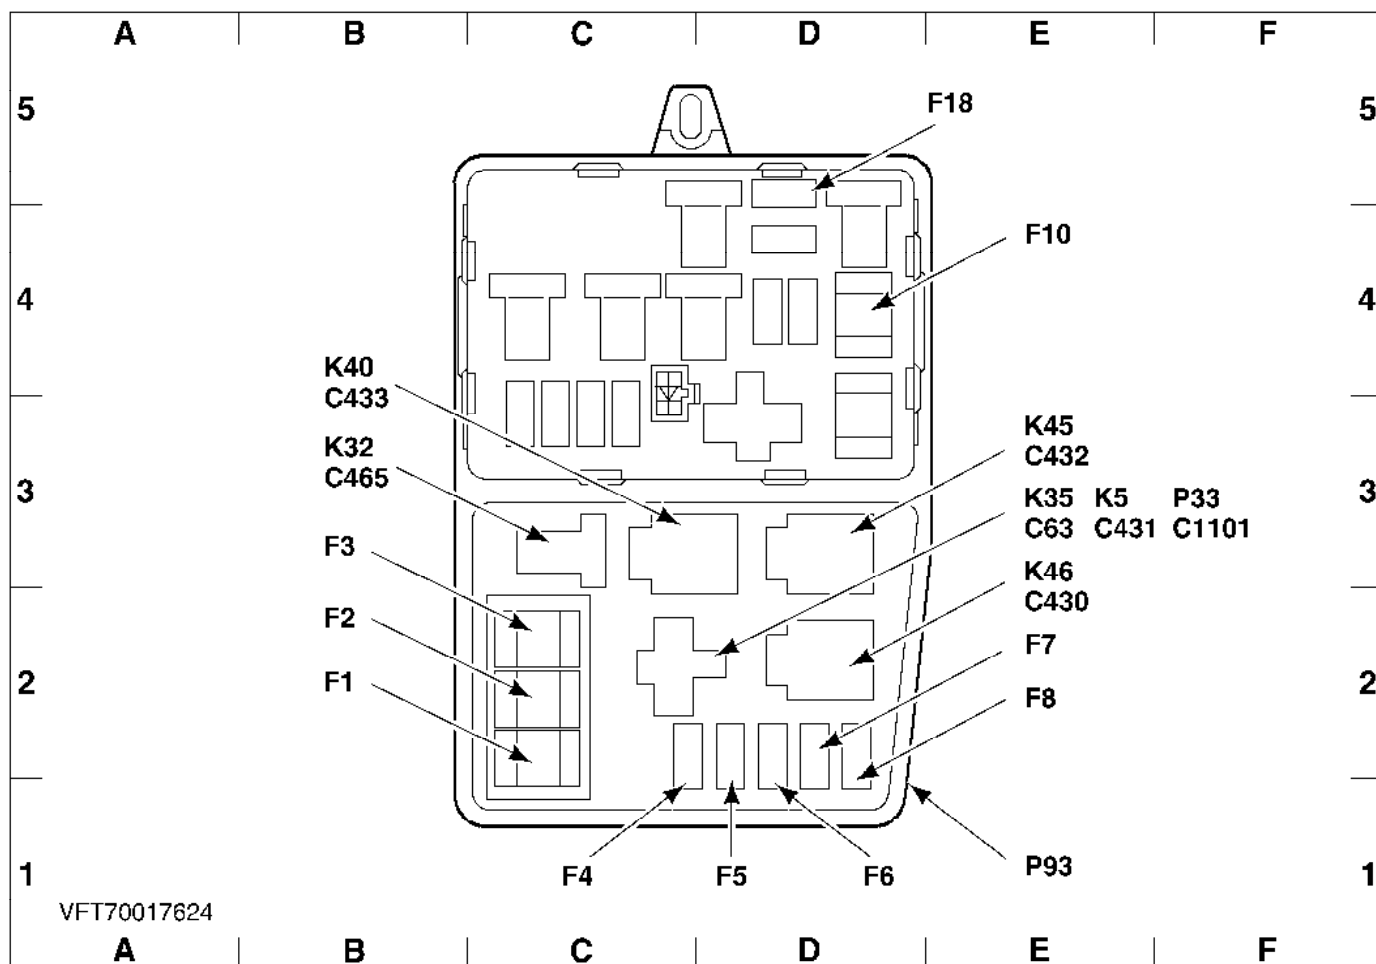


K45 Engine cooling fan relay, Duratec-VE, as of 01/97

### **Best View**

➡ Engine Cooling, Duratec-VE, as of 01/97 303-03B-00-002

engine compartment, front, LH side, in Battery Junction Box (BJB) (E 3)

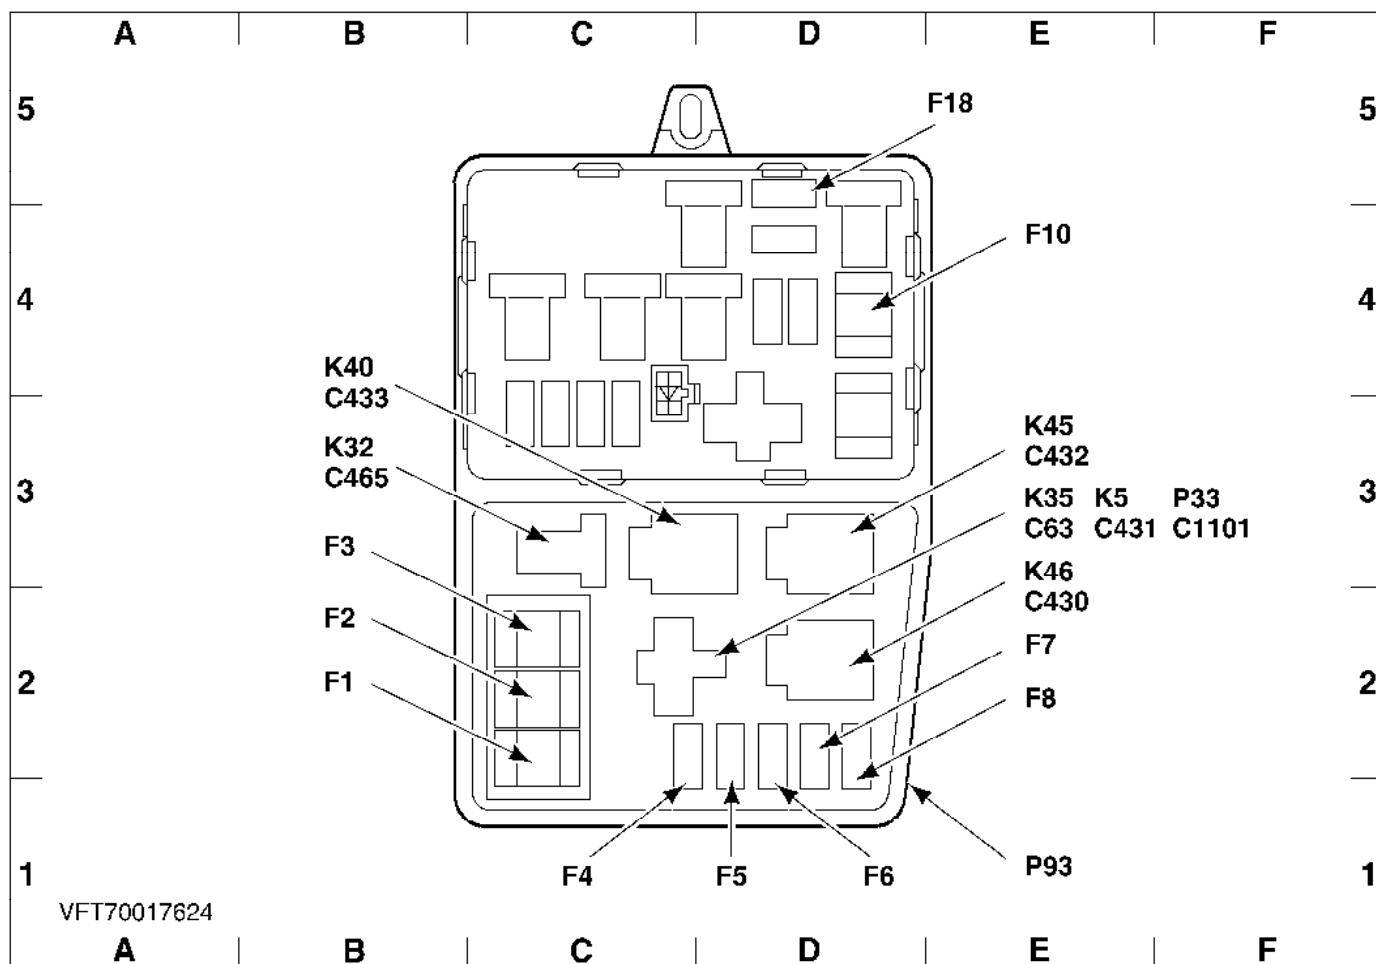


K45 Engine cooling fan relay, Duratec-VE, manual transmission, as of 03/97

### **Best Views**

- ➡ Engine Cooling, Duratec-VE, before 01/97 303-03B-00-001
- ➡ Engine Cooling, Duratec-VE, as of 01/97 303-03B-00-002

engine compartment, front, LH side, in Battery Junction Box (BJB) (E 3)

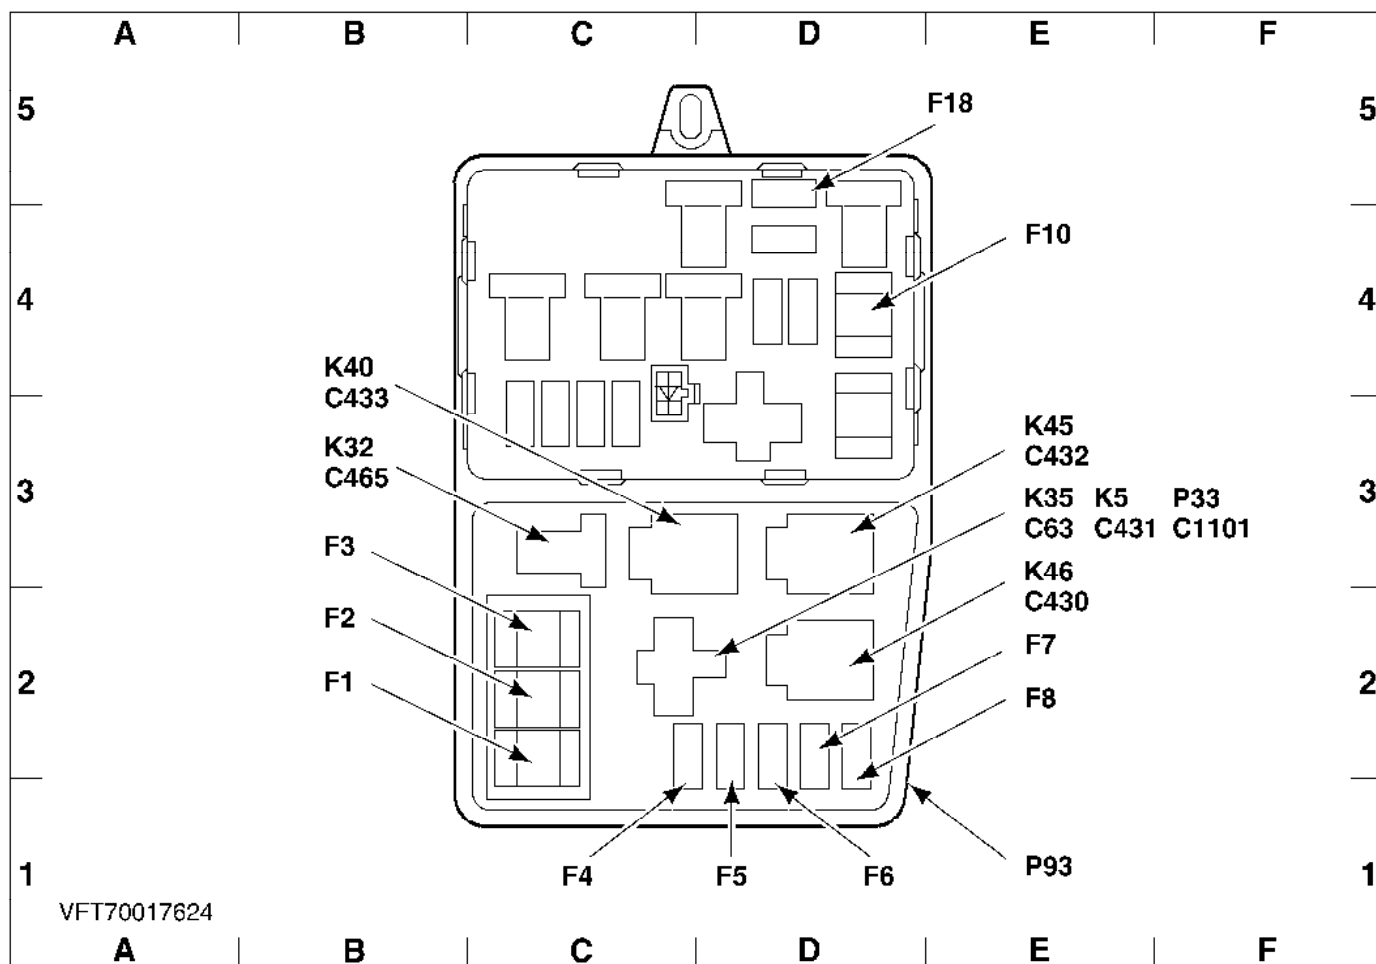


K45 Engine cooling fan relay, Duratec-VE, manual transmission, before 03/97

### **Best Views**

- ➡ Engine Cooling, Duratec-VE, before 01/97 303-03B-00-001
- ➡ Engine Cooling, Duratec-VE, as of 01/97 303-03B-00-002

engine compartment, front, LH side, in Battery Junction Box (BJB) (E 3)



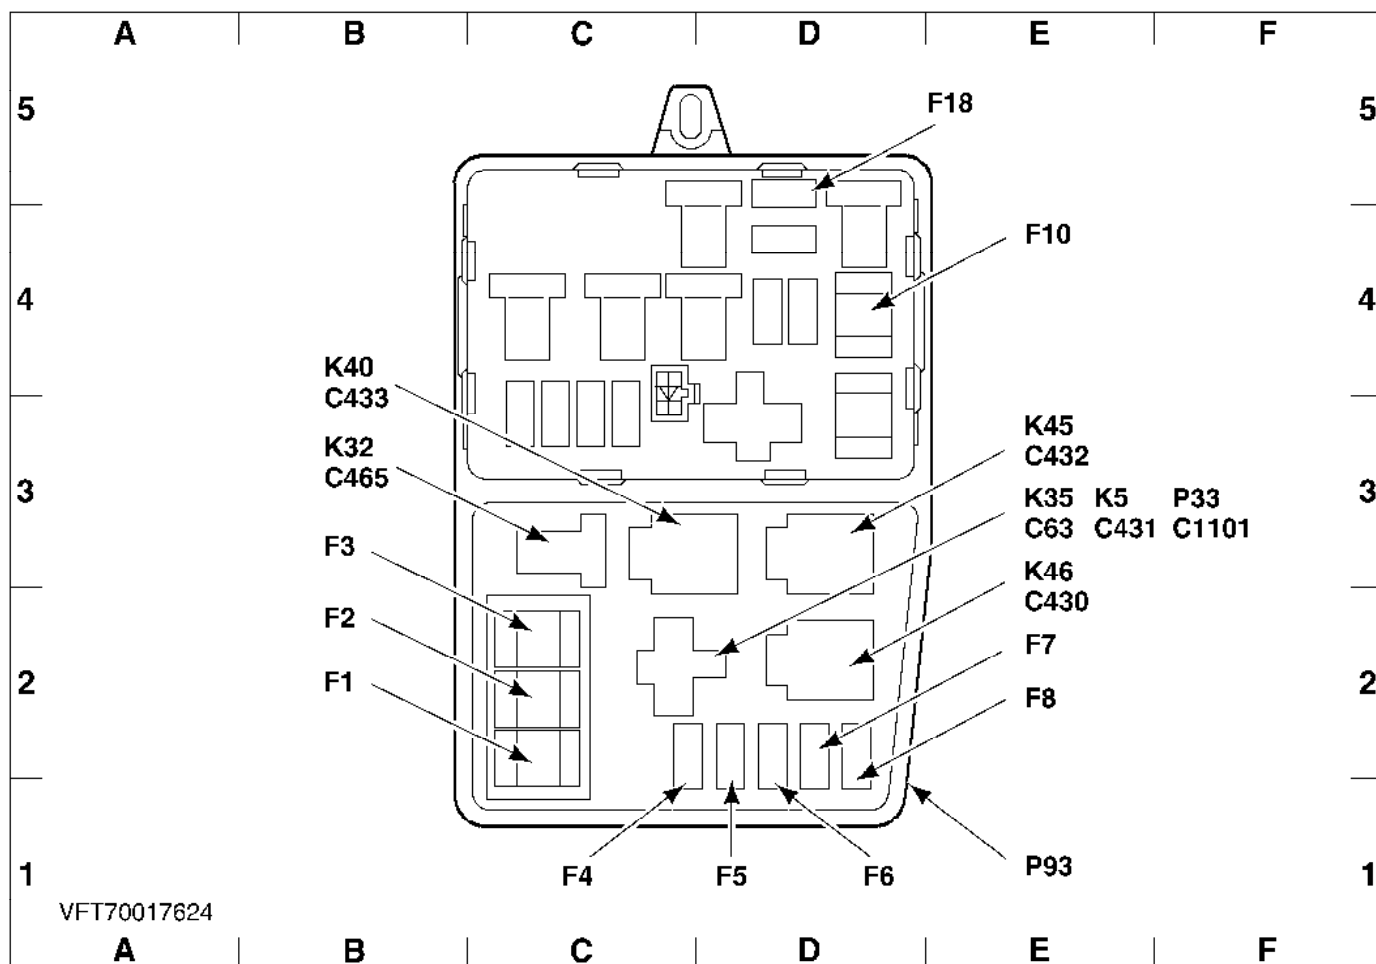


K45 Engine cooling fan relay, petrol engines, before 01/97

### **Best Views**

- ➡ Engine Cooling, Duratec-VE, before 01/97 303-03B-00-001
- ➡ Engine Cooling, TCI Diesel, before 01/97 303-03C-00-001

engine compartment, front, LH side, in Battery Junction Box (BJB) (E 3)

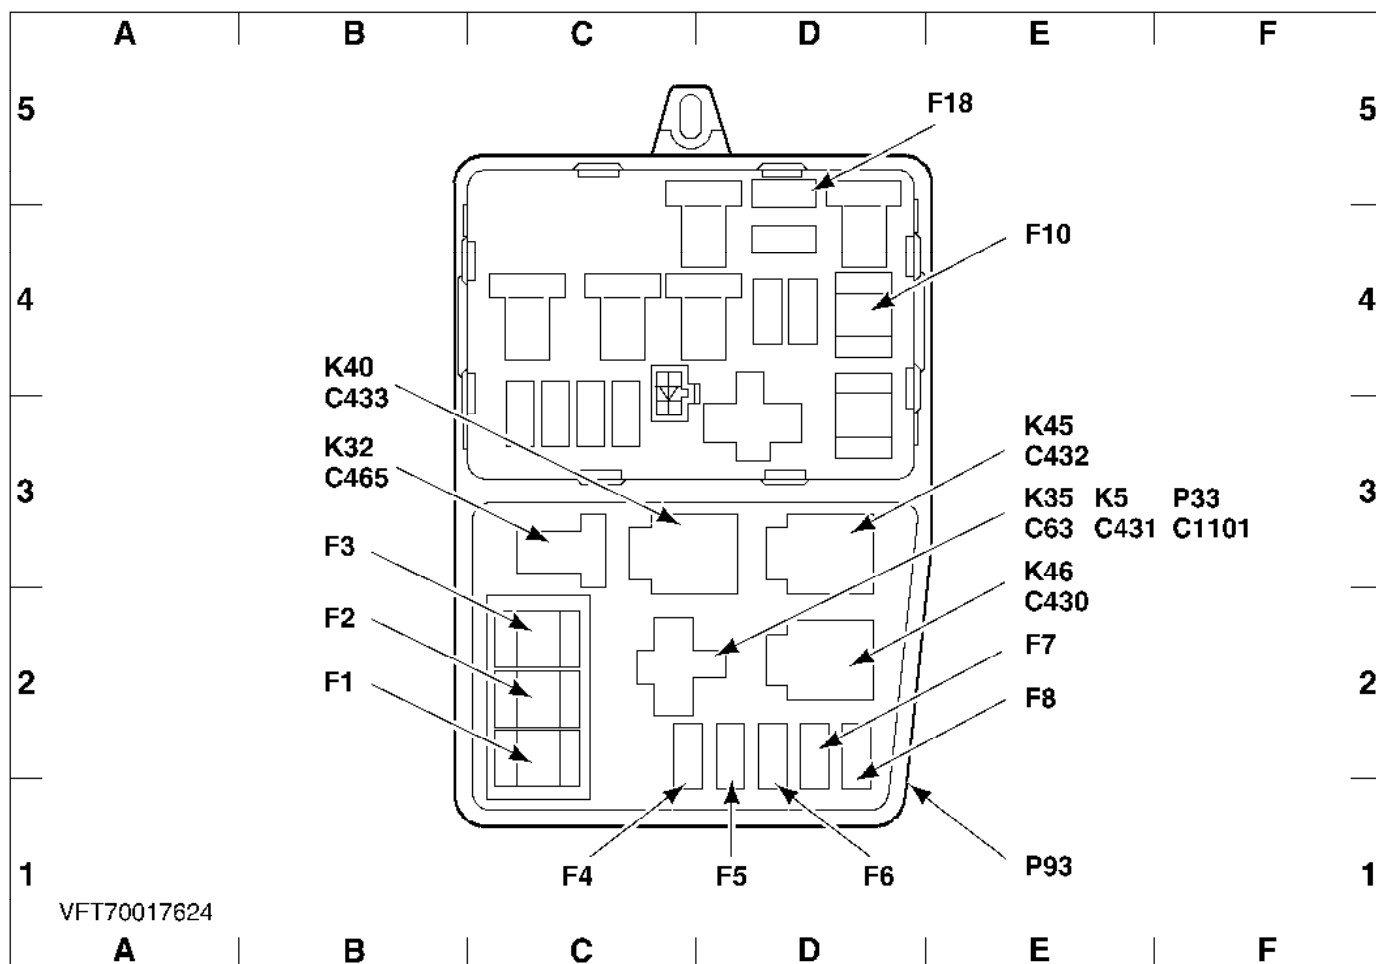


K45 Engine cooling fan relay, petrol engines, as of 01/97

### **Best Views**

- ➡ Engine Cooling, Duratec-VE, as of 01/97 303-03B-00-002
- ➡ Engine Cooling, TCI Diesel, as of 01/97 303-03C-00-002

engine compartment, front, LH side, in Battery Junction Box (BJB) (E 3)

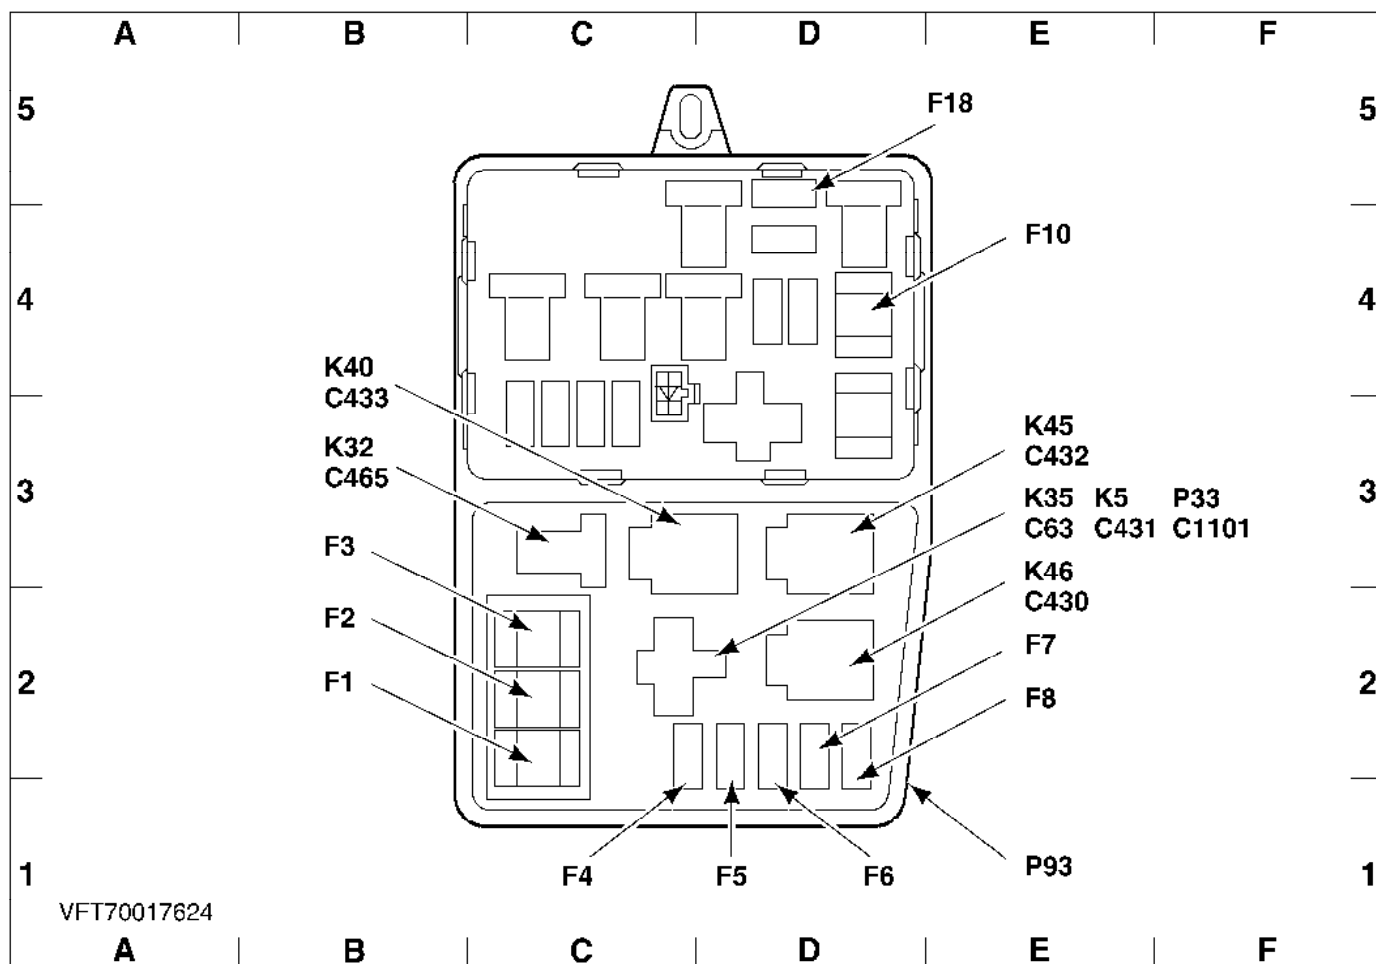


## K45 Engine cooling fan relay, Air conditioning

### Best Views

- ➡ Engine Cooling, ZETEC-E, without air conditioning 303-03A-00-001
- ➡ Engine Cooling, Duratec-VE, before 01/97 303-03B-00-001
- ➡ Engine Cooling, Duratec-VE, as of 01/97 303-03B-00-002
- ➡ Engine Cooling, TCI Diesel, before 01/97 303-03C-00-001
- ➡ Engine Cooling, TCI Diesel, as of 01/97 303-03C-00-002

engine compartment, front, LH side, in Battery Junction Box (BJB) (E 3)

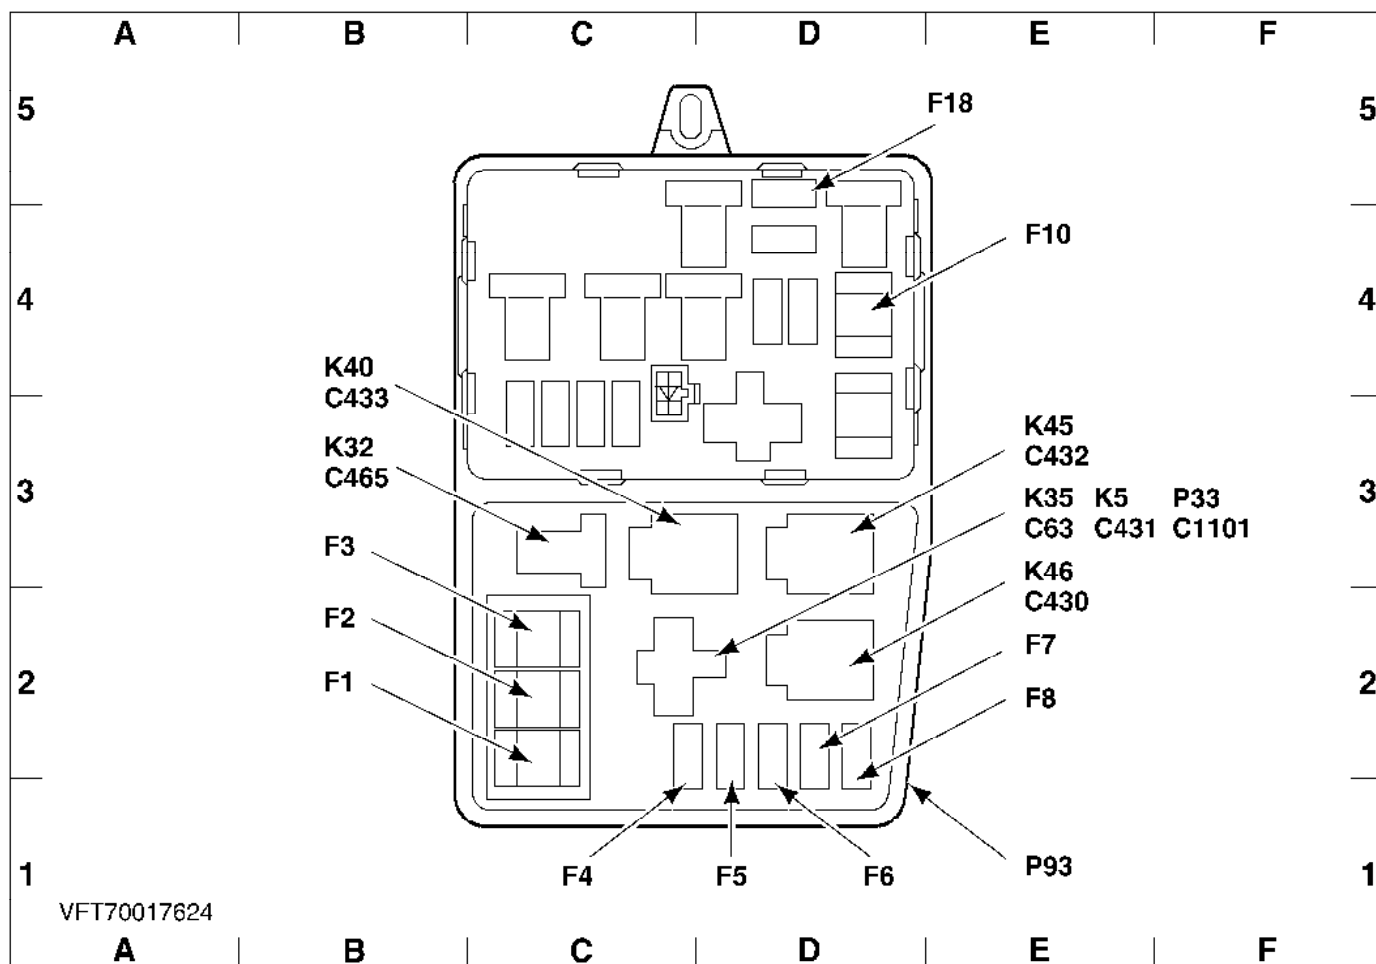


## K45 Engine cooling fan relay, TCI Diesel

### Best Views

- ➡ Engine Cooling, TCI Diesel, before 01/97 303-03C-00-001
- ➡ Engine Cooling, TCI Diesel, as of 01/97 303-03C-00-002

engine compartment, front, LH side, in Battery Junction Box (BJB) (E 3)

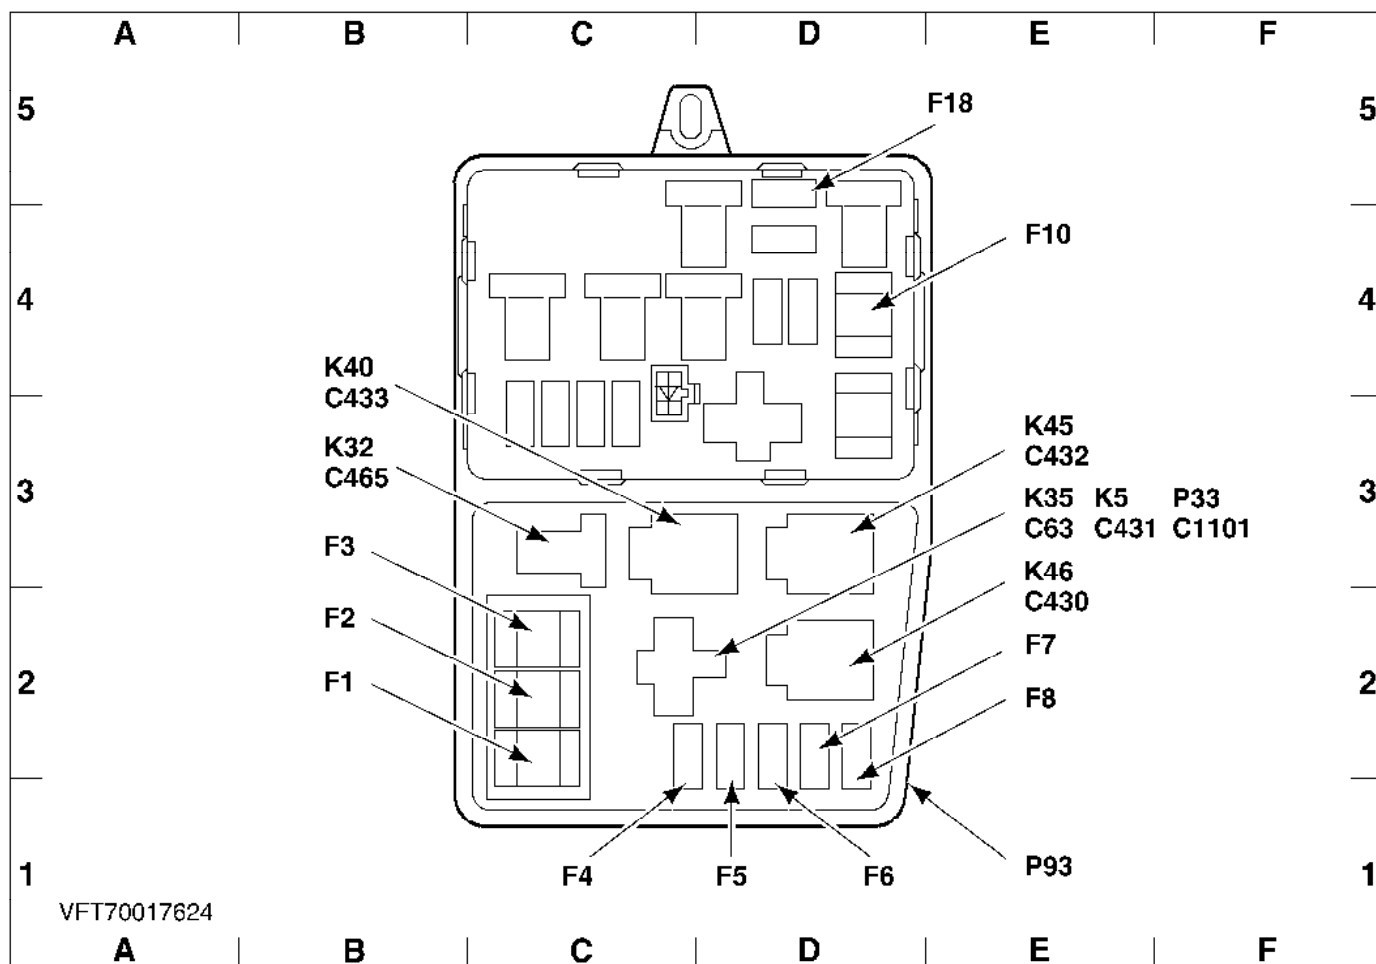


## K45 Engine cooling fan relay, TCI Diesel, before 01/97

### **Best View**

➡ Engine Cooling, TCI Diesel, before 01/97 303-03C-00-001

engine compartment, front, LH side, in Battery Junction Box (BJB) (E 3)

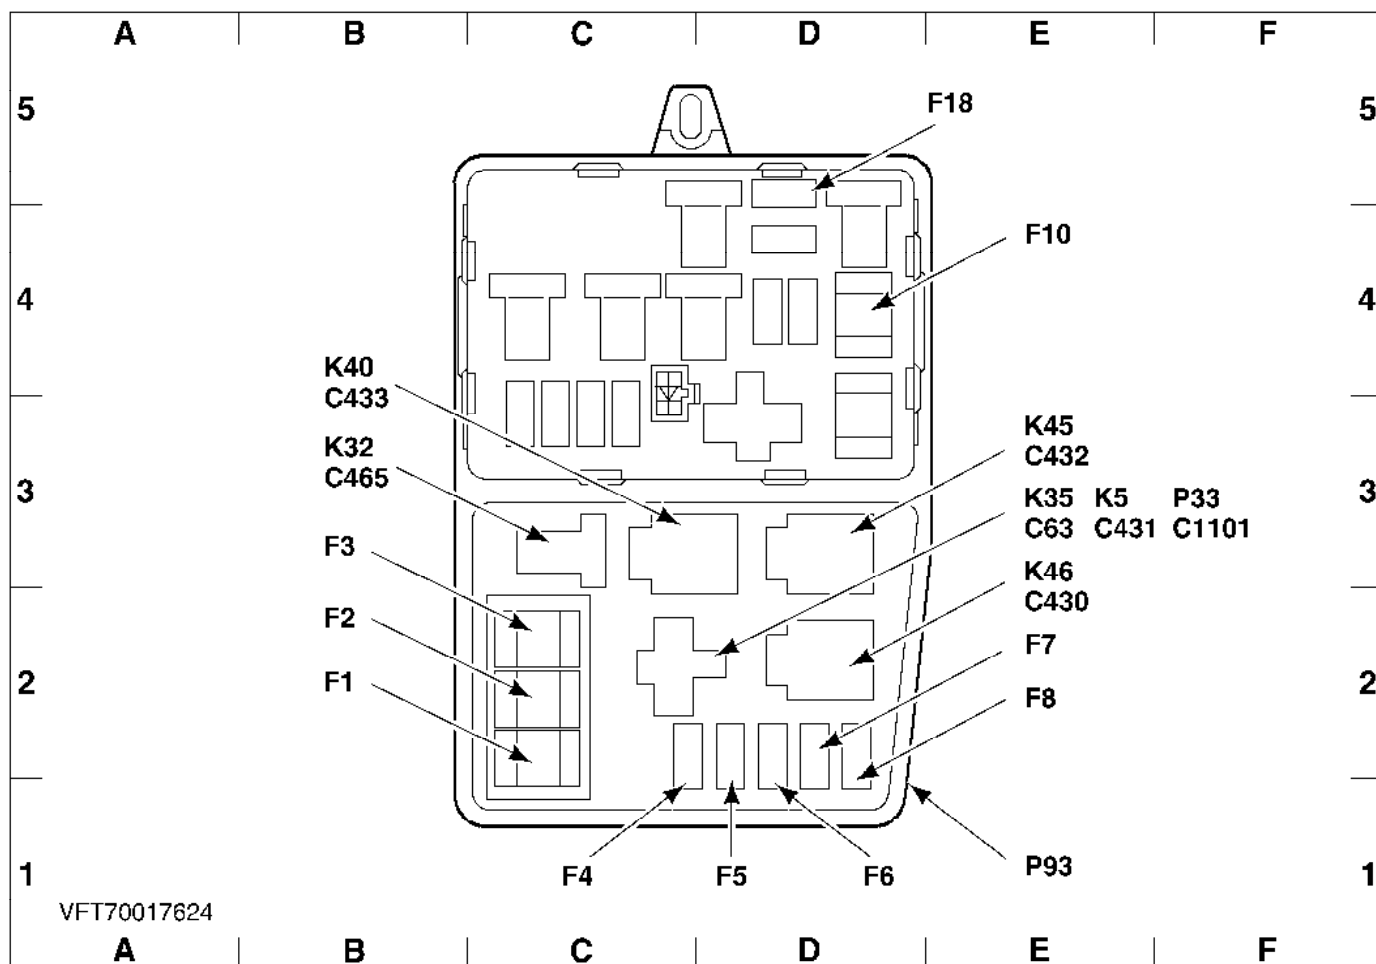


## K45 Engine cooling fan relay, TCI Diesel, as of 01/97

### **Best View**

➡ Engine Cooling, TCI Diesel, as of 01/97 303-03C-00-002

engine compartment, front, LH side, in Battery Junction Box (BJB) (E 3)

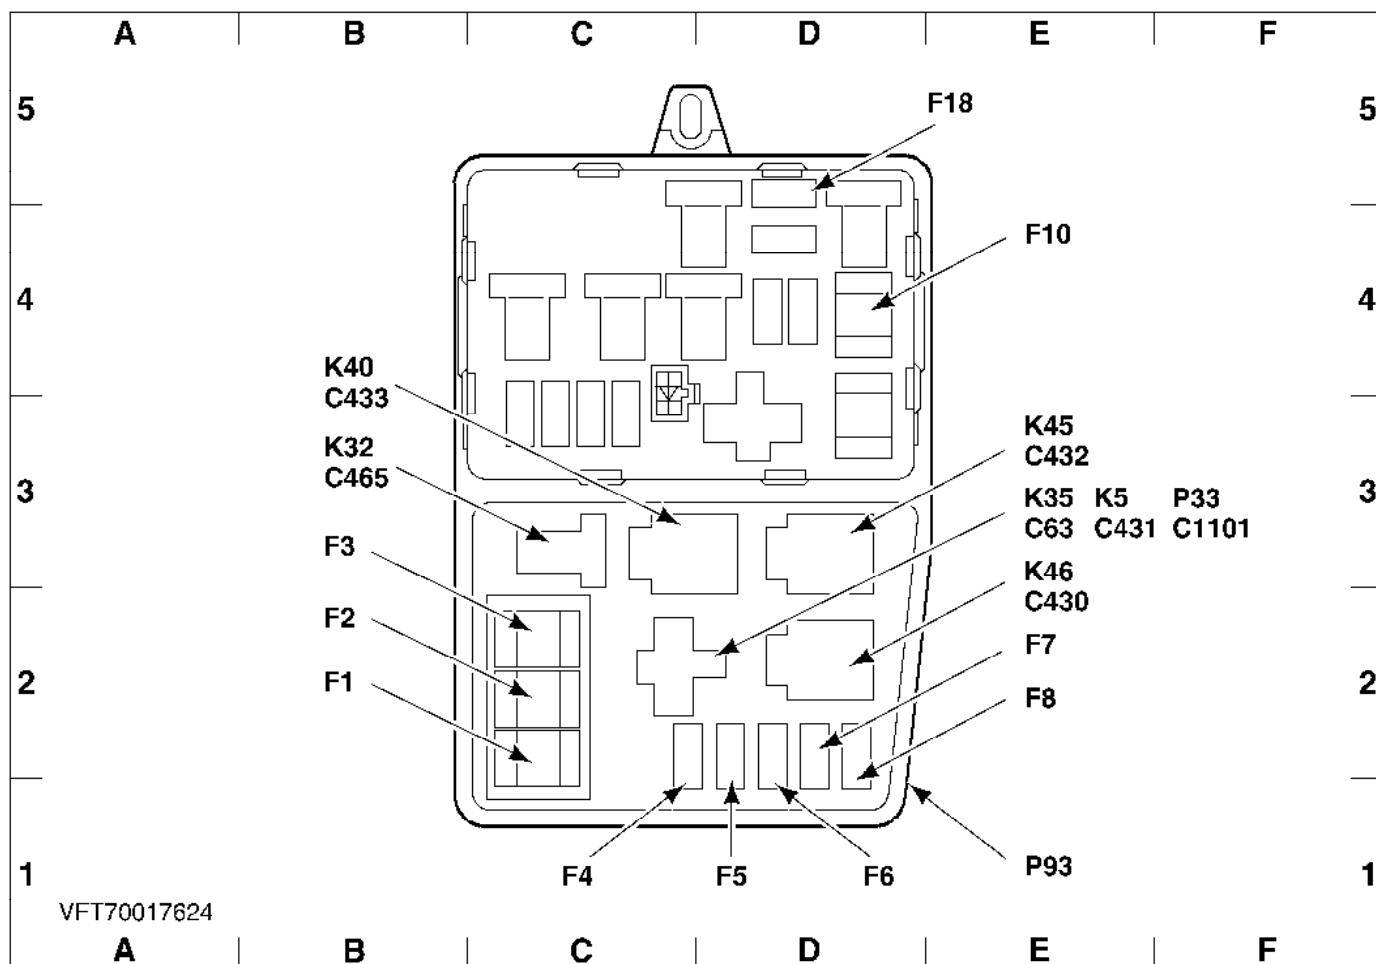

## K45 Engine cooling fan relay, F2

### Best Views

- ➔ Engine Cooling, ZETEC-E, without air conditioning 303-03A-00-001
- ➔ Engine Cooling, Duratec-VE, before 01/97 303-03B-00-001
- ➔ Engine Cooling, Duratec-VE, as of 01/97 303-03B-00-002
- ➔ Engine Cooling, TCI Diesel, before 01/97 303-03C-00-001
- ➔ Engine Cooling, TCI Diesel, as of 01/97 303-03C-00-002

engine compartment, front, LH side, in Battery Junction Box (BJB) (E 3)

