



## Strut and Spring Assembly (157810)


### Removal

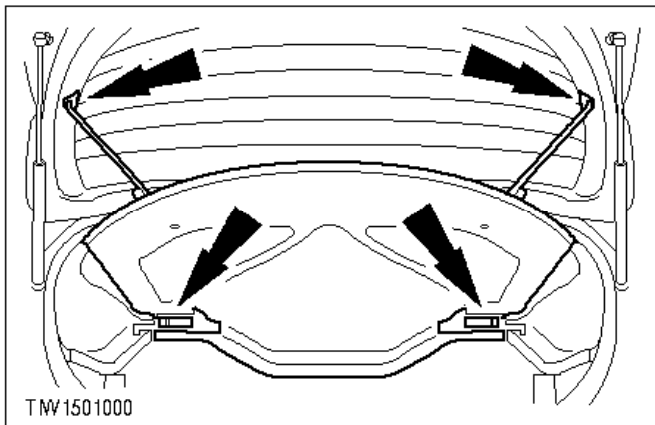


1. Remove the parcel shelf.

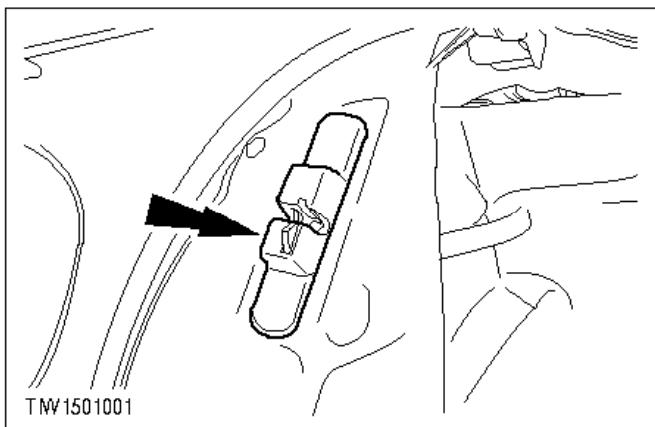


2. Remove the rear seat latch cover.

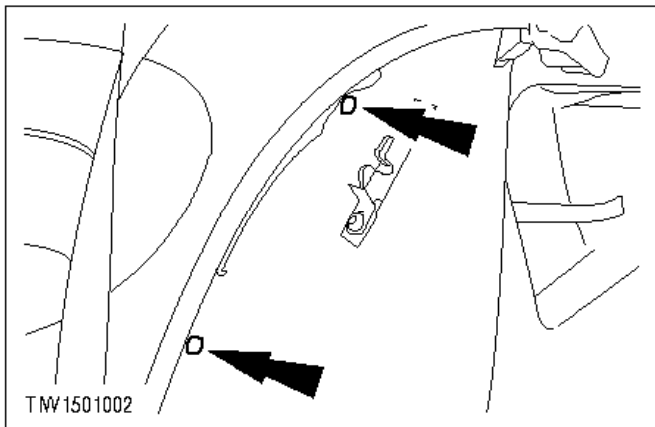


3. Remove two luggage compartment trim panel studs.

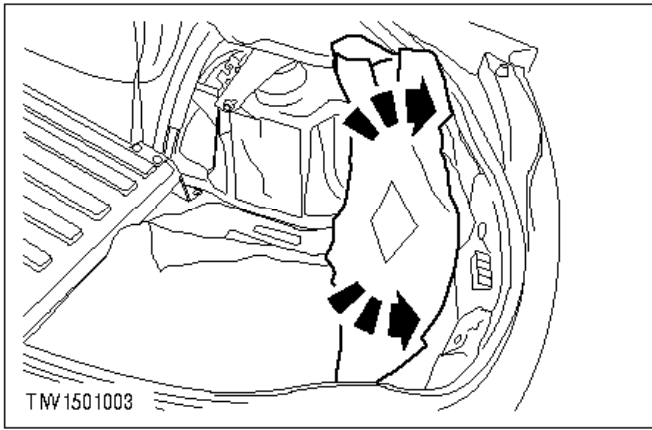


4. Remove the luggage compartment trim panel.

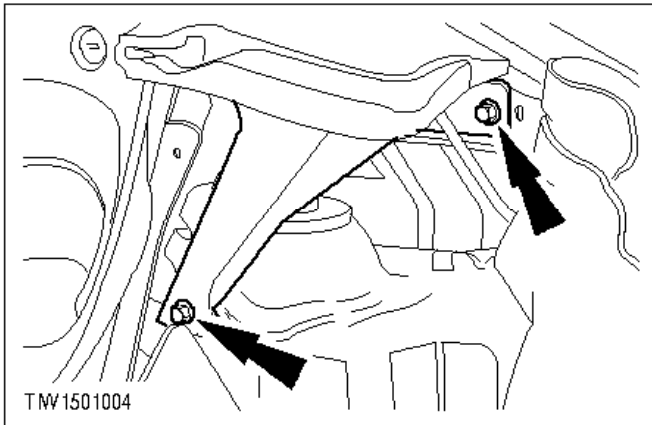


5. Remove the safety belt retaining bracket lower bolt and upper rear bolt.

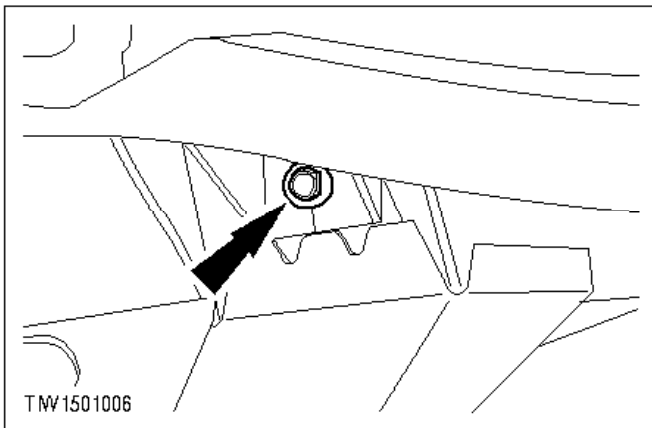

6. Remove the safety belt retaining bracket upper front bolt and remove the bracket.

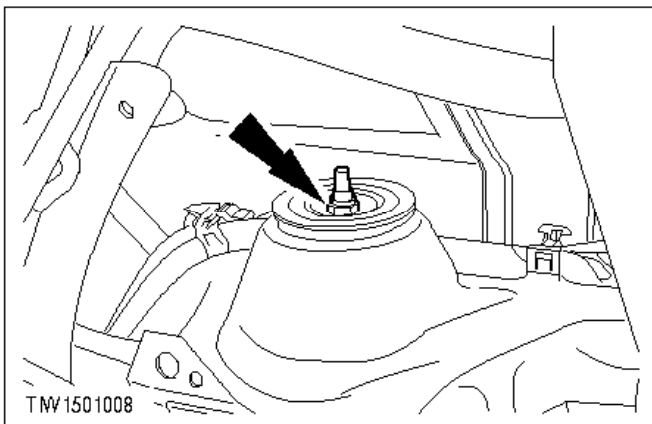


7. Remove the top mounting nut.
8. Raise and support the vehicle. For additional information, refer to [«Section 100-02»](#).

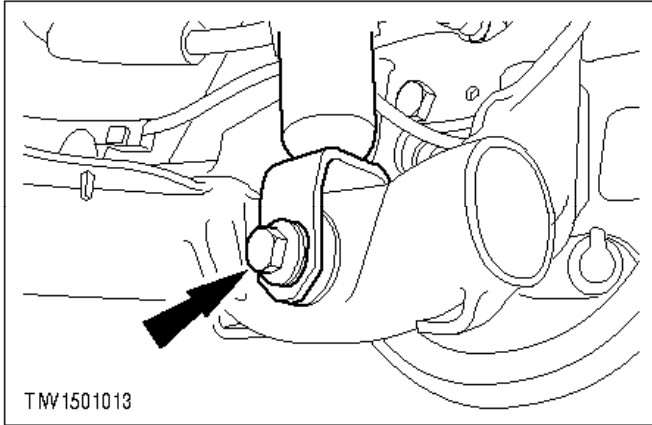


9. Remove the lower mounting bolt.
10. Remove the strut and spring assembly.


## Installation

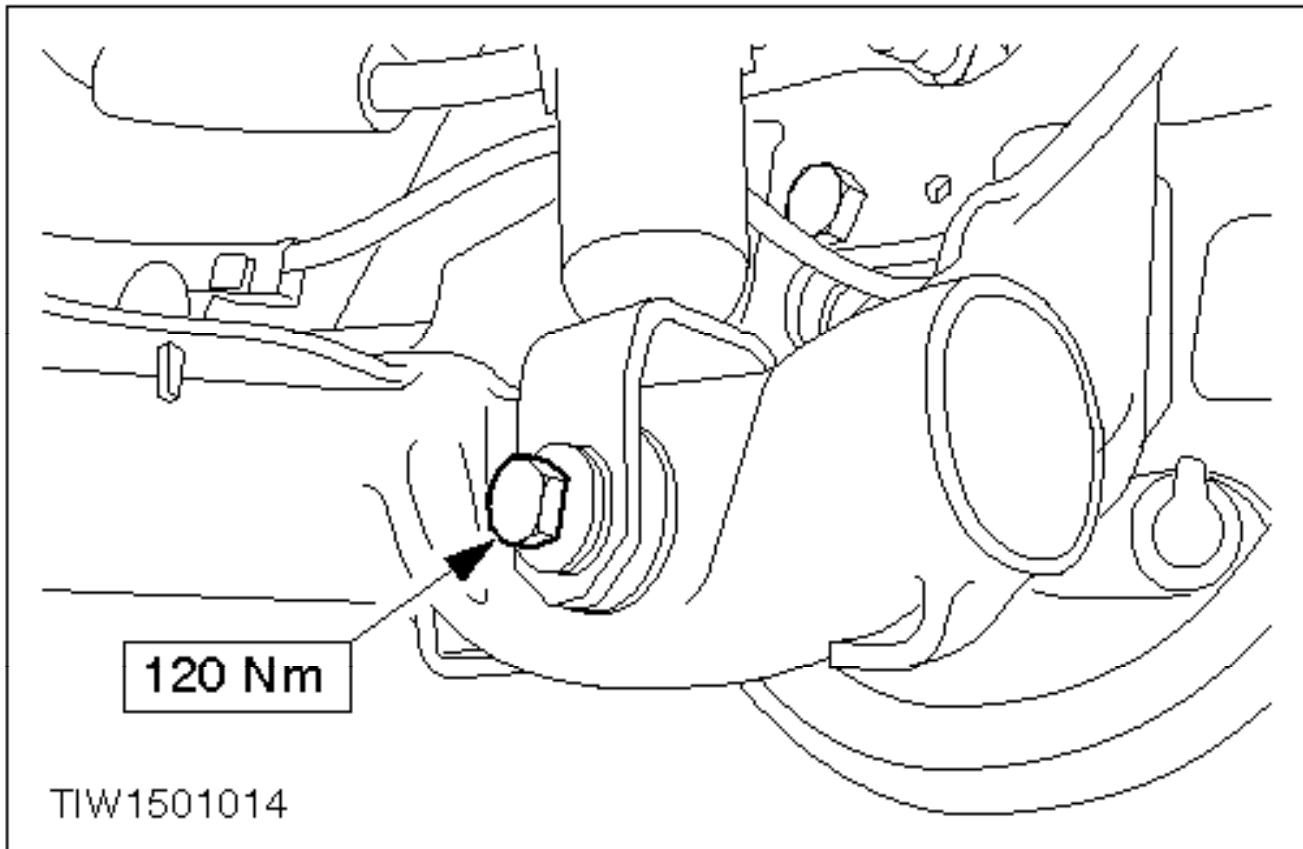

1. **Note:**  
The final tightening of the rear suspension components should be carried out when the vehicle weight is on the road wheels.  
To install, reverse the removal procedure.

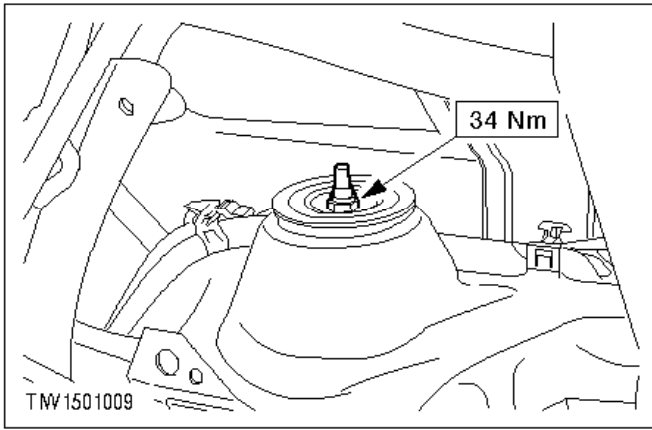

Refer to corresponding illustration.

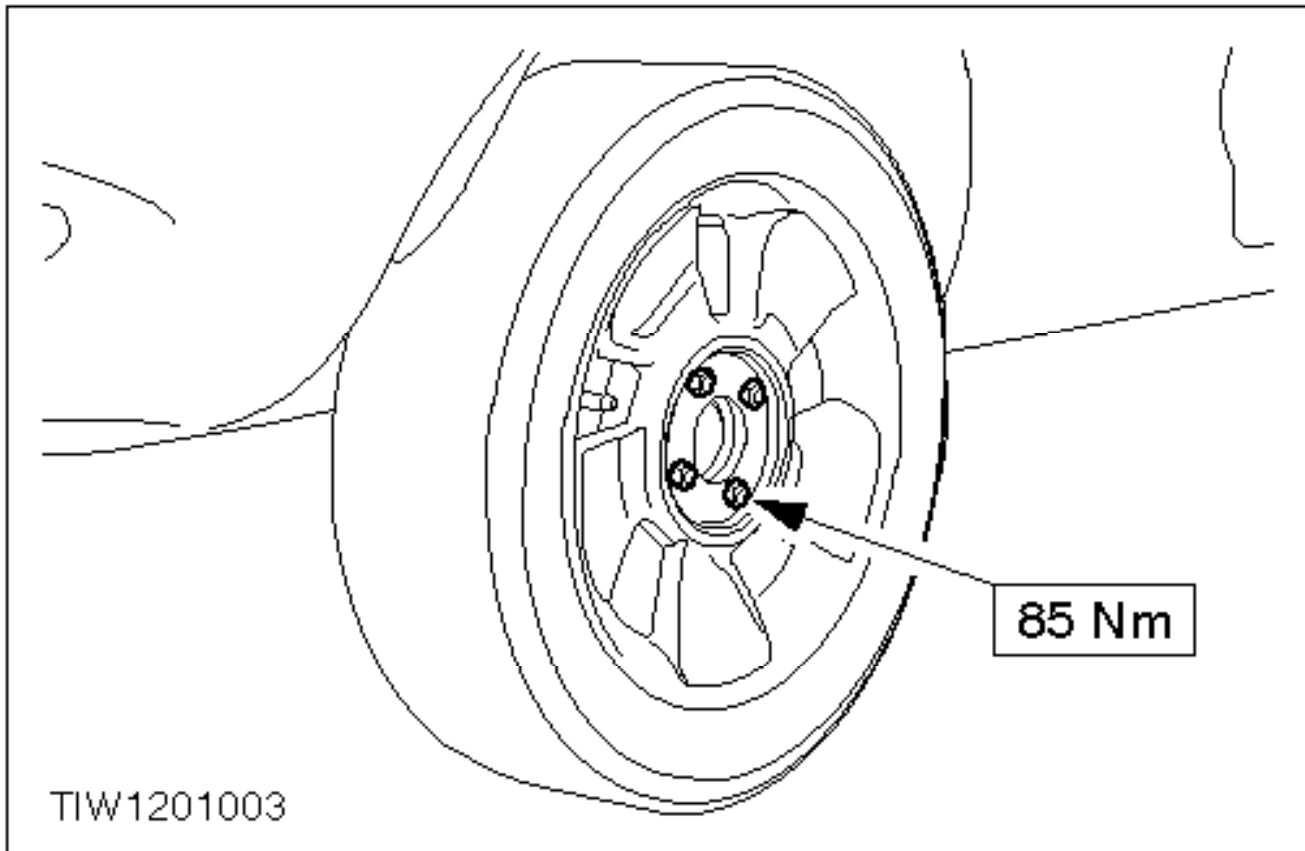

Refer to corresponding illustration.

---