
GENERAL PROCEDURES

Autolock and Horn Chirp Programming

1. Close all the doors and windows.
 2. Confirm that the ignition key is OFF.
 3. **NOTE:** Steps 5 through 9 must be carried out within 30 seconds.
Turn the ignition key from OFF to RUN.
 4. Press the door lock control switch UNLOCK button 3 times.
 5. Turn the ignition key from RUN to OFF.
 6. Press the door lock control switch UNLOCK button 3 times.
 7. Turn the ignition key from OFF to RUN.
 8. Verify that the horn chirps. This indicates the enable/disable mode is ready to accept program changes.
 9. Press the door lock control switch UNLOCK button then the LOCK button one time to command the module to toggle the autolock feature.
 10. Verify that the horn chirps. There should be one chirp indicating that the autolock feature is disabled. If one chirp is heard followed by a longer sound of the horn, the autolock feature is enabled.
 11. Turn the key to the OFF position or wait 5 minutes to exit the enable/disable mode.
 12. Verify that the horn chirps once to indicate that programming mode has been exited.
-